

# **Operating manual**

## **Washer extractors**

**W465H, W475H/M/S, W485M/S, W4105H/M/S,  
W4130H/M/S, W4180H/M/S, W4240H, W4250M/S,  
W4300H, W4330M/S,  
W4280X, W4350X  
Type W3..., EXSM.X.**

## **Clarus Control**

*Thinking of you*

 **Electrolux**



# Contents

---

## Contents

Safety precautions .....	5
Procedure for use .....	7
Preparations .....	8
Detergent supply .....	8
The "Move back" key .....	9
To start the wash program .....	9
To start a wash program from the program library .....	13
To change parameters in the current program step .....	16
Rapid advance.....	17
Show weight.....	18
No water reduction.....	19
Manual functions .....	20
Pause.....	25
Text.....	26
Select new wash program.....	27
Auto restarts .....	28
Change °F/°C .....	29
Manual mode .....	30
Manual operating when no program is running.....	30
Statistics .....	36
To select statistics.....	36
Resetting statistic registers .....	38
Memory card.....	54
General introduction.....	54
To select the "Memory card" function .....	55
Execute wash program from memory card.....	57
Copy program from memory card to CLS.....	58
Copy program from CLS to memory card.....	60
Delete program in memory card.....	62
Clear memory card.....	63
Maintenance.....	65
Daily.....	65
Every month .....	65
Every third month .....	65
Cleaning the mop elements.....	66
Service information – fault tracing.....	67

The manufacturer reserves the right to make changes to design and component specifications.



## Safety Precautions

---



### Safety Precautions



**The machine is only intended for water-wash use.**

**Do not allow minors to use the machine.**

**Do not hose down the machine with water.**

**The machine's door lock must under no circumstances be bypassed.**

**If the machine develops a fault, this must be reported to the person in charge as soon as possible. This is important both for your safety and that of others.**


**The machine is not intended to be used by people (including minors) with reduced physical or mental capacity or lack of experience and knowledge. Such people must be instructed in the use of the machine by a person who has responsibility for their safety. Minors must be supervised to ensure that they do not play with the machine.**



**All external equipment which is connected to the machine must be CE/EMC-approved and connected using an approved shielded cable.**




**In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.**

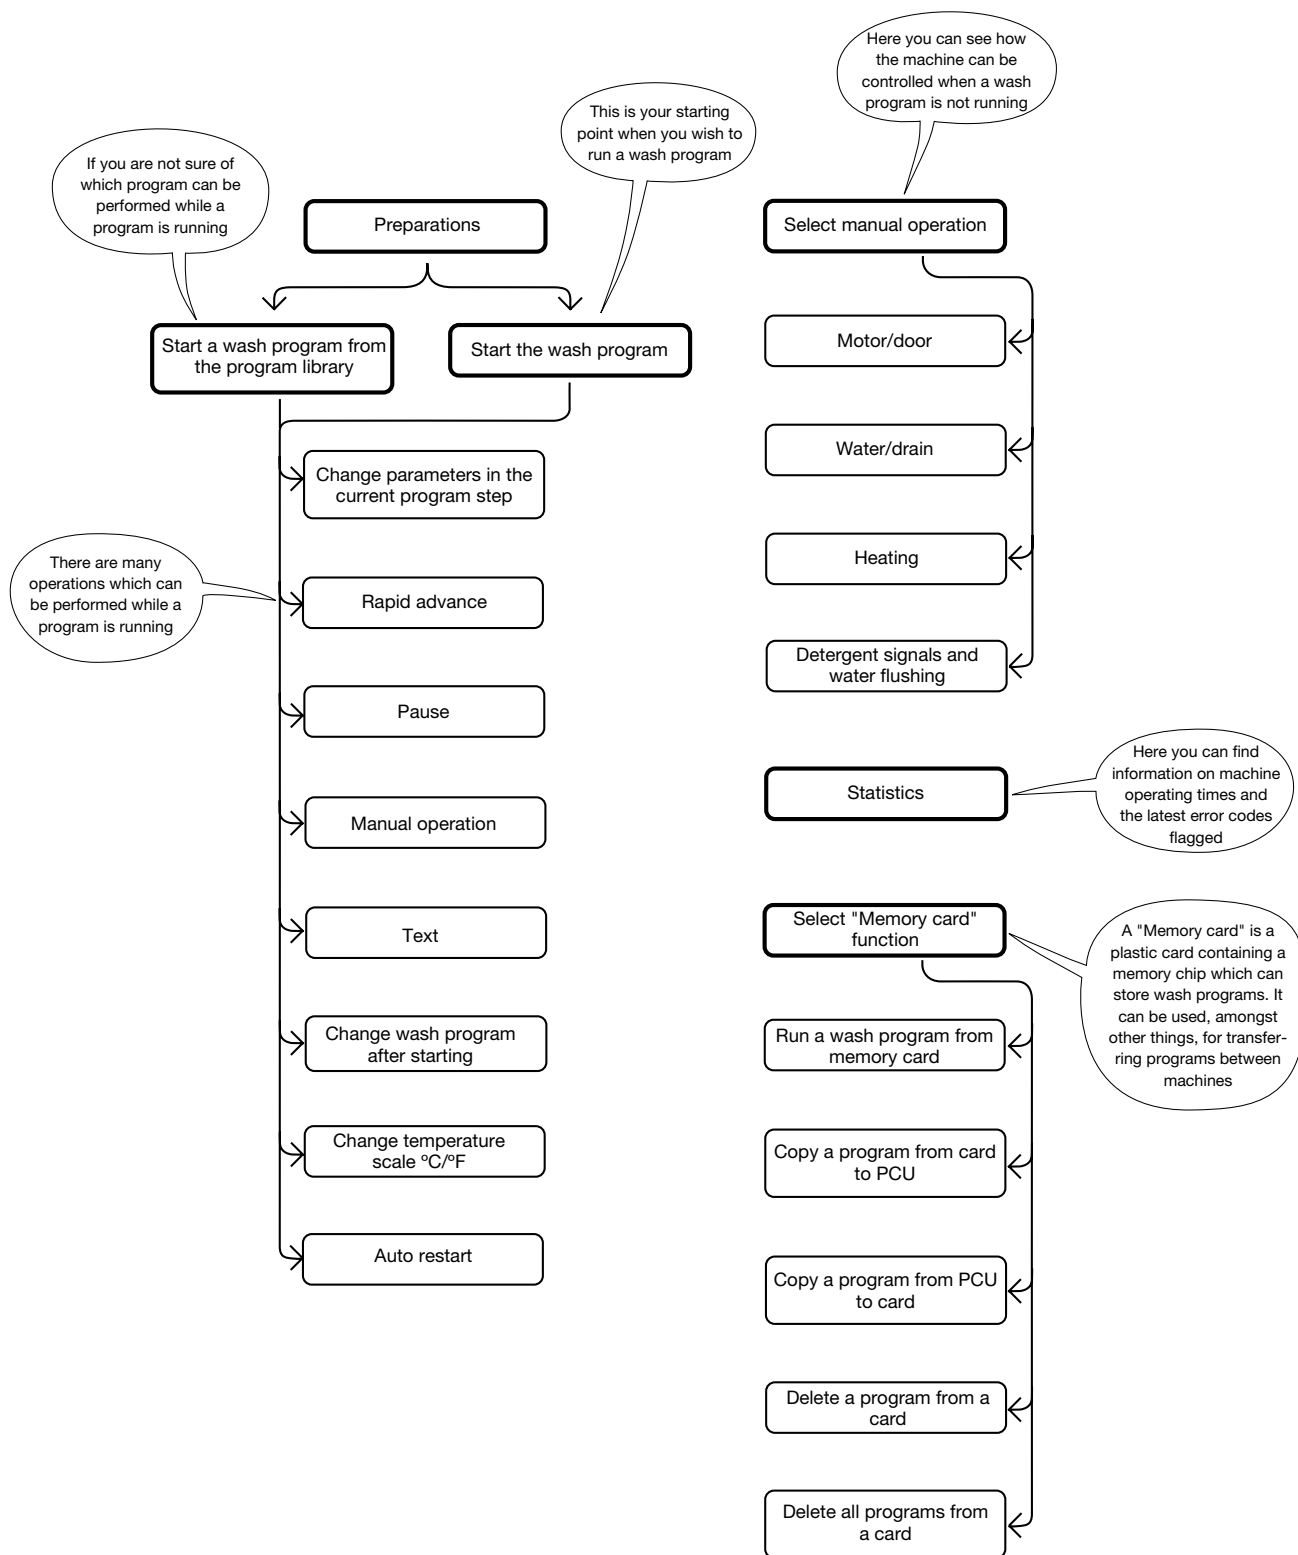

## Procedure for use

- ① This machine is controlled by a microprocessor-based program control unit. There are many advantages to this equipment, including:
  - timing, levels and temperatures are controlled with great precision and flexibility
  - detailed information on wash programs, machine status and operations, wash times and temperatures can be accessed in plain language on the large display screen
  - it is possible for the user to create new wash programs, and to adapt programs precisely on the basis of experience and to suit various types of textile, degrees of soiling etc.
  - a very high level of machine safety through continuous monitoring and built-in safety interlocks
  - the program control unit has a reader for "memory cards". These are cards the size of a credit card which contain a memory chip. Memory cards allow the user to:
    - transfer wash programs between a PC and the machine, or from one machine to another
    - run programs straight from a memory card
  - great flexibility during program operation:
    - rapid advance both forwards and backwards in the program
    - change temperatures, program module lengths and extraction speeds directly, during program operation
    - start a different program at any time during program operation.

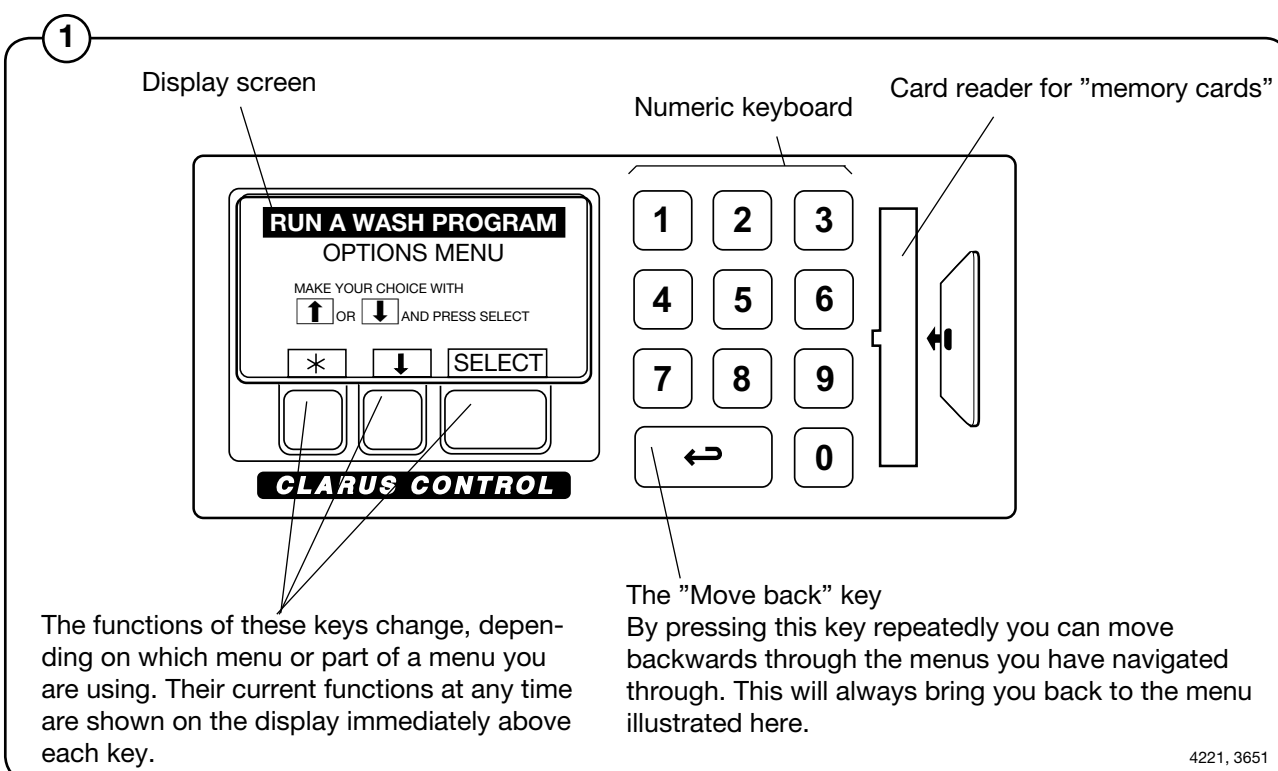


## Preparations

- Sort the load, paying attention to the textile care labels on the items. Empty all pockets and do up zip fasteners.
- Open the machine door, check that the drum is empty, load the items into the machine and close the door.

## Detergent supply

- ② If the machine is not connected to an automatic liquid chemical injection system, use the 4-compartment detergent supply on the top of the machine to add the correct amount of detergent and fabric softener as recommended by their manufacturers.

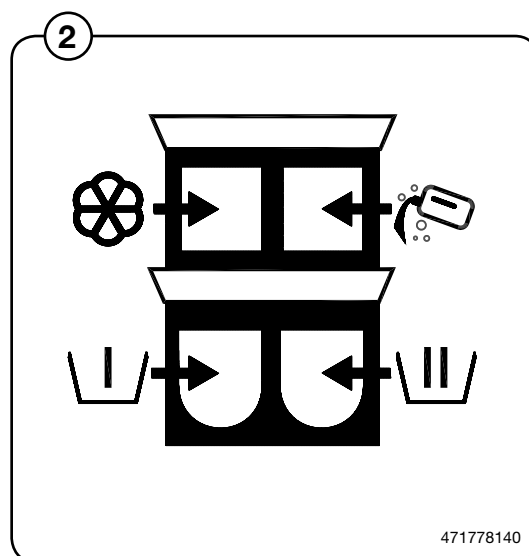

Prewash, powder or liquid detergent, if option "Prewash" has been selected.



 
Main wash. Two compartments, one for powder detergent and one for liquid.



Fabric softener, liquid




The "Move back" key




If you find you are in the wrong place, or if you want to undo earlier key presses:  
**Press the "Move back" key one or more times.**

The "Move back" function


Each press of the "Move back" key moves you back one menu, in reverse order. By pressing this key repeatedly you can return to this menu at any time:

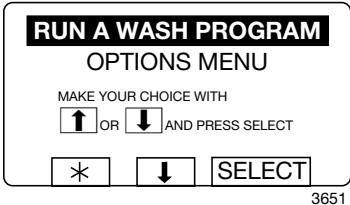

To start the wash program

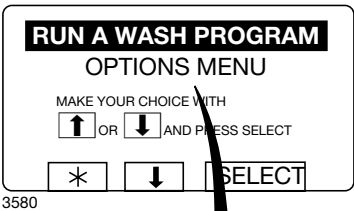

 If this menu is not currently displayed:  
**Press  repeatedly.**




If "OPTIONS MENU" is highlighted:



**Press .**



When "RUN A WASH PROGRAM" is highlighted:  
**Press .**

Two ways of starting a program


By entering the actual program number

Enter the actual program number if you know it, then press **SELECT**.

By starting from the program library

(see section "To start a wash program from the program library")

If you are unsure about the programs available, you can select a program from the program library, where the programs are listed with their descriptions.

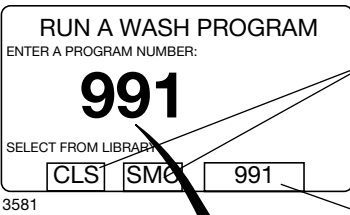

Here you can select programs from the program libraries. See the section entitled "To start a wash program from the program library".

Displayed here will be the number of the most frequently used program.  
**Press this key if you want to select this program.**

**If you have entered the wrong number**  
Enter the correct number to overstrike the earlier one.

for example: **991**

**Use the numeric keys to enter the program number**



 
**Press SELECT.**



If you have a memory card in the program control unit, and the program you selected is both on the memory card and in the PCU, you will be asked "FROM CLS OR SMC?".



**Press CLS if you want to take the program from the PCU.**



**Press SMC if you want to take the program from the memory card.**

In some of the text shown on the display, Clarus Control is referred to as CLS and the memory card is referred to as SMC.

**Memory cards**

A memory card is a plastic card, the size of a credit card, with an electronic memory chip inside it. This card is capable of storing 10 to 15 wash programs of normal size. If the programs are mostly small ones, more of them can be stored, whereas larger programs will reduce the number which can be held by the card. Memory cards of this type can be used to:

- transfer wash programs from one machine to another
- run wash programs straight from the card
- transfer wash programs from a PC to a memory card and from a memory card to a PC (these procedures, and how to write a wash program on a PC, are described elsewhere).

Memory cards are described in detail in the section "Memory card".

3582

**RUN A WASH PROGRAM**  
ENTER A PROGRAM NUMBER:

**991**

NORMAL 95°C

**00:00**

TEXT START

Program name

Delayed start time (hrs:mins)

If you want to see the description of the program:

TEXT

Press TEXT.

Choose 1 or 2:

1 To start the program now:

Press START.

①

START

2 Delayed start

Use the numeric keys to enter a time (max. 99 hrs). This parameter appears on the right of the display.

②

1 2 3  
4 5 6  
7 8 9  
0

START

Press START.

**DELAY START**  
ENTER A PROGRAM NUMBER:

**991**

NORMAL 95°C

**14:30**

\* \* EXIT

 
Time left before the machine is to start

If you want to cancel the delayed start:


EXIT

Press EXIT

During a wash program:



3627

Press  to make the machine pause during the wash program.

## Pressing "Text" displays more information

The text displayed is a description of the wash program selected. This text description is inserted when a new wash program is created. This procedure is described fully in the programming manual.

 
## Delayed start

Delayed start means that the machine will not start the wash program until the time entered has elapsed.

This function allows you, for example, to load the machine in the evening, but delay the start of the wash until early the next morning, to end in time for the next shift.

## Two ways of pausing during a wash program

There are two ways of pausing during a wash program:

1. By pressing .
2. As an additional function. This is described in section "Pause".

The following information is displayed during the wash program:

Current program step

Time left for this program step

Set temperature

Actual temperature

Remaining program time

Drum speed

991 NORMAL 95°C

PROGRAM STEP: MAIN WASH 1  
STEP TIME: 720 SEC  
SET TEMPERATURE: 85 C  
ACTUAL TEMPERATURE: 21 C  
REMAINING TIME: 70 MIN  
DRUM SPEED: 1000 RPM

RAPID ADVANCE  
SHOW WEIGHT

3583

↑ ↓ SELECT

- To terminate a program before it has finished**
- Select RAPID ADVANCE and press SELECT. Advance to "END OF PROGRAM" and press SELECT.
  - Wait until "THE DOOR IS OPEN" appears on the display.
  - Now the door can be opened.

**To change parameters in the current program step**

**See section "To change parameters in the current program step".**

Certain program step parameters can be altered during the course of the program. In the example (left), the length of the program step and the heating temperature can be altered.

RAPID ADVANCE

SHOW WEIGHT  
NO WATER REDUCTION  
MANUAL FUNCTIONS  
PAUSE  
TEXT  
SELECT NEW WASH PROGRAM  
AUTO RESTARTS  
CHANGE °F/°C



If required:



Select a function using the cursor keys.



Press SELECT.

**Additional functions during the program**

**Rapid advance (see section "Rapid advance")**

Rapid advance through the program to the program step required. Rapid advance can be used to move both forwards and backwards through the program.

**Show weight (see section "Show weight")**

The actual load weight is shown in large digits on the display (weight display mode). (On machines with weighing equipment only.)

**No water reduction (see section "No water reduction")**

Machines with weighing equipment installed adjust the water level automatically according to the load weight. This function lets you switch off water level reduction during the current program.

 
**Manual functions (see section "Manual functions")**

The following functions can be controlled manually during the course of the program:

- all water valves, drain and pumps (where applicable).
- limit highest extraction speed.
- motor on/off after end of wash program.
- flush detergent.

**Pause (see section "Pause")**

The machine stops. The drain valve remains closed.

Another way to pause the program: Press .

**Text (see section "Text")**

Display description of wash program (if available).

**Select new wash program (see section "Select new wash program")**


You can switch to using a different wash program at any stage during the wash. Once this function has been selected, the current step (for example, rinse) of the earlier program will be allowed to finish and then the new program will start (from the beginning).

**Auto restarts (see section "Auto restarts")**

 
Here you enter the number of times you wish the wash program to restart automatically.

 
**Change °F/°C (see section "Change °F/°C")**

To start a wash program from the program library

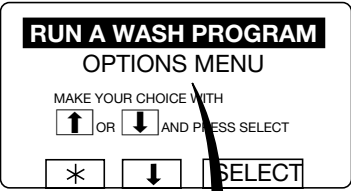


 
3580



If this menu is not currently displayed:  
Press  repeatedly.



If "OPTIONS MENU" is highlighted:  
Press .



When "RUN A WASH PROGRAM" is highlighted:  
Press **SELECT**.

What is the program library?

The program library lists all wash programs, both user and standard programs, showing their program numbers and a description, for example:

1	MY OWN 40 °C
2	MY OWN 60 °C
3	MY OWN 90 °C
991	NORMAL 95°C
992	NORMAL 60°C
993	NORMAL 40°C
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM. PRESS 60°C
997	PERM. PRESS 40°C
998	DELICATE 30°C
999	EXTR. HIGH 5 MIN

Each time a new program is stored in the machine program memory, its number and description will be inserted automatically into the program library.

The program library may be used for starting a wash program, but is also used in programming, when a wash program needs to be modified or if a new program is to be created on the basis of an existing one.

RUN A WASH PROGRAM

ENTER A PROGRAM NUMBER:

991

SELECT FROM LIBRARY

CLS

SMC

OK

4031

CLS

SMC

To select a program from the PCU program library:

**Press CLS.**

If there is a memory card in the PCU and you wish to select a program on that:

**Press SMC.**

Select library via menu

You can also select the program library via the option "OPTIONS MENU". Then select "WASH PROGRAM LIBRARY".

MENU

MAKE A CHOISE:

WASH PROGRAM LIBRARY

PROGRAMMING MODE

SETTINGS 1

MEMORY CARD

SERVICE MODE

STATISTICS

⇓

⇓

SELECT

3590

WASH PROGRAM LIBRARY

PROGRAMMING MODE

SETTINGS 1

MEMORY CARD

SERVICE MODE

STATISTICS

MANUAL MODE

SETTINGS 2

EXIT

LIBRARY

PR. NO

NAME

991

NORMAL 95°C

992

NORMAL 60°C

993

NORMAL 40°C

994

INTENSIVE 95°C

995

INTENSIVE 60°C

996

PERM PRESS 60°C

997

PERM PRESS 40°C

998

DELICATE 30°C

999

EXTR. HIGH 5 MIN

\*

⇓

SELECT

3591

⇓

991	NORMAL 95°C
992	NORMAL 60°C
993	NORMAL 40°C
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM PRESS 60°C
997	PERM PRESS 40°C
998	DELICATE 30°C
999	EXTR. HIGH 5 MIN

Press ⇓ the required number of times...

...to highlight the wash program required.

SELECT

**Press SELECT.**

RUN A WASH PROGRAM

ENTER A PROGRAM NUMBER:

991

NORMAL 95°C

00:00

TEXT

START

3582

Program name

Delayed start time (hrs:mins)

If you want to see the de-  
scription of the program:

TEXT

Press TEXT

Choose 1 or 2:

1 To start the program now:  
Press START.

1

START

2

123

456

789

0

2 Delayed start

Use the numeric keys  
to enter a time (max. 99  
hrs). This parameter ap-  
pears on the right of the  
display.

START

Press START.

DELAY START

ENTER A PROGRAM NUMBER:

991

NORMAL 95°C

14:30

\*

\*

EXIT

Time (in hours and minutes) left  
before the machine is to start.

EXIT

Olf you want to cancel the  
delayed start:  
Press EXIT.

The functions which are avai-  
lable during program opera-  
tion are described in sections  
"To change parameters in the  
current program step - Auto  
restart".

Pressing "Text" displays more information


The text displayed is a description of the wash  
program selected. This text description is inserted  
when a new wash program is created. This proce-  
dure is described fully in the programming manual.

Delayed start

Delayed start means that the machine will not  
start the wash program until the time entered has  
elapsed.

This function allows you, for example, to load the  
machine in the evening, but delay the start of the  
wash until early the next morning, to end in time for  
the next shift.


To change parameters in the current program step

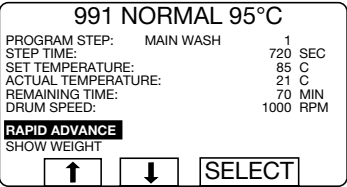


3584

During program operation the display will look like this (see section "To start the wash program").





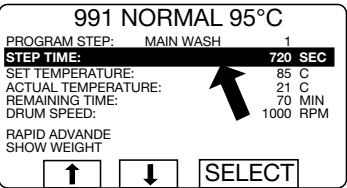







**You can alter the following program steps:**  
**Prewash, Main wash, Rinse, Drain, Soak**  
Length of program step (max. 9998 seconds), heating temperature (max. 97°C).  
**Extraction**  
Length of program step (max. 3599 seconds), extraction speed.

Press  one or more times...



 ...to highlight the line required.

  **If you have entered the wrong parameter**  
Continue pressing numeric keys to overstrike the incorrect parameter.  
**Note:** always use the same number of digits as used on the display to overstrike the incorrect parameter.  
Example:  
To change the time for the program step to **30** seconds, enter **030** to overstrike the earlier parameter.

 Press **SELECT**.  
    
    
    
  
 Press **SELECT**.



## Rapid advance

991 NORMAL 95°C

PROGRAM STEP: MAIN WASH 1

STEP TIME: 720 SEC

SET TEMPERATURE: 85 C

ACTUAL TEMPERATURE: 21 C

REMAINING TIME: 70 MIN

DRUM SPEED: 1000 RPM

RAPID ADVANCE

SHOW WEIGHT

↑

↓

SELECT

3583

During program operation the display will look like this (see section "To start the wash program").

Check that "RAPID ADVANCE" is highlighted.

RAPID ADVANCE

SHOW WEIGHT

NO WATER REDUCTION

MANUAL FUNCTIONS

PAUSE

TEXT

SELECT NEW WASH PROGRAM

AUTO RESTARTS

CHANGE °F/°C



If it is not highlighted:



Press ↑ or ↓ one or more times to highlight "RAPID ADVANCE".



Press SELECT.

To terminate a program before it has finished

- Select RAPID ADVANCE and press SELECT. Advance to "END OF PROGRAM" and press SELECT.
- Wait until "THE DOOR IS UNLOCKED" appears on the display.
- Now the door can be opened.

991 NORMAL 95°C

RAPID ADVANCE

MAIN WASH 1

DRAIN 1

RINSE 1

DRAIN 2

EXTRACT 1

↑

↓

SELECT

3586

MAIN WASH 1

DRAIN 1

RINSE 1

DRAIN 2

EXTRACT 1

RINSE 2

DRAIN 3

EXTRACT 2

RINSE 3

DRAIN 4

EXTRACT 3

END OF PROGRAM



Press ↓ or ↑ one or more times to highlight the program step you wish to advance to.



Press SELECT.

Rapid advance works in both directions

Rapid advance works in both directions, using ↓ and ↑.


Using rapid advance to move forwards allows you to skip one or more program steps. Using rapid advance backwards allows you to repeat one or more program steps.

Automatic return to normal display

If no keys are pressed within 20 seconds, the display will revert automatically to its previous appearance.

For machines with weighing equipment installed only!

Show weight

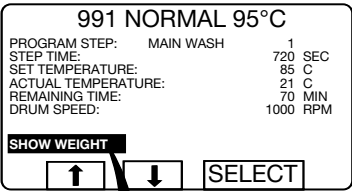




3583

During program operation the display will look like this (see section "To start the wash program").

**Show weight**

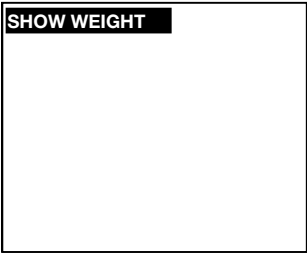The actual weight is shown in large digits on the display (weight display mode).  
If the weighing equipment is not connected, the error message "FUNCTION NOT ALLOWED" will appear. See the section "Fault-finding, weighing equipment" in the machine manual.



Press  or  one or more times to highlight "SHOW WEIGHT".



Press SELECT.




4775

Weight display mode:  
The actual net weight is shown in large digits on the display.

**Return to normal display**

 
The display will return to normal at the end of the "time for weight display" set as a parameter in Settings 1. The manufacturer's default parameter is 20 seconds.

**To end weight display sooner**

Press  or use the numeric keys to enter a new program number.

For machines with weighing equipment installed only!

## No water reduction

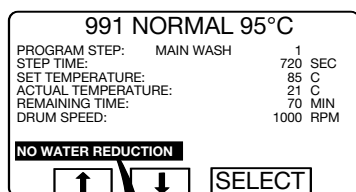


During program operation the display will look like this (see section "To start the wash program").

### No water reduction

The wash load is weighed during the program and the water level is adjusted automatically according to its weight. If the load is not a full one, the water level will be reduced according to a water level reduction table. You can switch off water level reduction at any stage of a program.

Note that if you select "NO WATER REDUCTION", this applies only to the program currently running. The next time a program is started, water level reduction will occur automatically again.

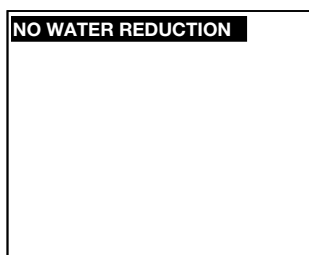


Press ↑ or ↓ one or more times to highlight "NO WATER REDUCTION".



Press SELECT.

Manual functions

Manual operation during a program

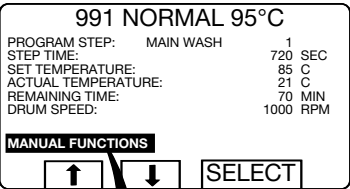


3583



During program operation the display will look like this (see section "To start the wash program").

**Two types of manual operation**

There are two types of manual operation, which should not be confused:

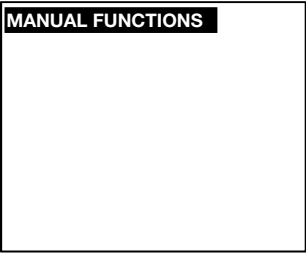
- **Manual operation during a program**  
These functions are described in this section.
- **Manual operation when no program is running**  
These functions are described in **section "Manual mode"**.



Press  or  one or more times to highlight "MANUAL FUNCTIONS".




Press **SELECT**.

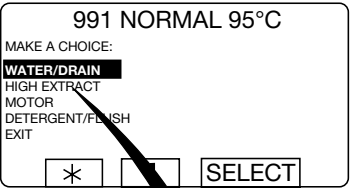

3679

**Automatic return to normal display**

If no keys are pressed within 20 seconds, the display will revert automatically to its previous appearance.

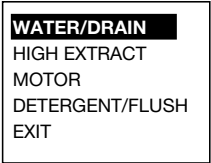

Use the cursor keys to select the function.



Press **SELECT**.

**Manual functions during a wash program**

**Water/drain (see section "Water/drain")**  
Allows manual operation of all water valves and the drain valve.

**High extract (see section "High extract")**  
Here you can limit the maximum extraction speed for the current program.

**Motor (see section "Motor")**  
Motor on/off after program has ended.

**Detergent/flush (see section "Detergent/flush")**  
Allows you to control all valves in the detergent compartment or in external detergent supply system.

Water/drain

MANUAL FUNCTIONS

WATER/DRAIN

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

LEVEL: 63 UNITS

\*

↓

OPEN

3680

To access this function, see instructions in section "Manual functions".

Note!

For this function, all of the menus will not be available on machines with one I/O board.

Water level in drum



Use ↓ and ↑ to select the water/drain option you require.

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

WATER FROM TANK 3

DRAIN

EXIT

Y/N

Press Y/N.  
With Y (Yes) the function is activated and with N (No) the function is not activated.



When you have finished:  
Press ↓ repeatedly to highlight "EXIT".

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

WATER FROM TANK 3

DRAIN

EXIT

SELECT

Press SELECT.

## High extract

MANUAL FUNCTIONS  
HIGH EXTRACT  
CURRENT MAXIMUM EXTRACT SPEED: 1000 RPM  
SELECT NEW EXTRACT SPEED:  
1000 RPM  
↑ ↓ SELECT

3681

1 2 3  
4 5 6  
7 8 9  
0

SELECT

To access this function, see instructions in section "Manual functions".

Maximum extraction speed in current program

Enter the maximum extraction speed you require for this program.


Press SELECT.

### To limit the program's highest extraction speed

This function allows you to modify the highest extraction speed allowed during the program.

Example:

Assume that the highest speed in the program is 1000 rpm and that you have set 700 rpm as the highest speed allowed.

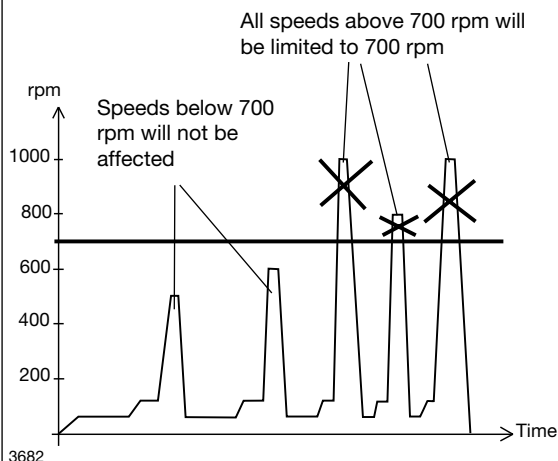

This change will affect the current program only. No change will be implemented if extraction is taking place at the time of the (attempted) change. The next time that this program is used, the original maximum speed will apply.

This function does not allow you to set a **higher** speed than the usual maximum speed for the program.

## Motor

MANUAL FUNCTIONS

MOTOR

MOTOR ON AFTER WASH

EXIT

\*

↓

Y/N

3683

To access this function, see instructions in section "Manual functions".

A toggle function:  
**Use Y/N to toggle the function from ON (Yes) to OFF (No).**

When you have finished:  
**Press ↓ to highlight "EXIT".**

**Press SELECT.**

Y/N

↓

MOTOR ON AFTER WASH

EXIT

SELECT

### Motor to rotate after program has ended

If you answer **Yes (Y)**:

The motor will continue to rotate in alternative directions after the program has ended. This prevents creasing of the load.

When the program has ended, the display will look like this:

991 NORMAL 95°C

MOTOR ON IN

MANUAL FUNCTIONS

\*

\*


STOP

3588

STOP

**Press STOP to stop the motor.**

## Detergent/flush

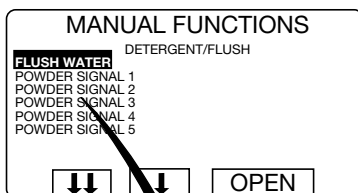


To access this function, see instructions in section "Manual functions".

**Note!**

For this function, all of the menus will not be available on machines with one I/O board.



Use ↓ and ↑ to select the function you require.

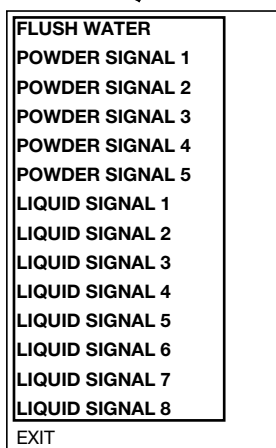**Detergent signals and water flushing****FLUSH WATER:**

This function uses water to clear detergent from the supply tubes of the detergent dispensing system.

**POWDER SIGNAL:**


This function will either: a) use water to dispense detergent from machine compartments, or: b) dispense detergent from an external system. The number of valves present will vary according to the machine type.

**Press OPEN.**

The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.




When you have finished:  
**Press ↓ repeatedly to highlight "EXIT".**

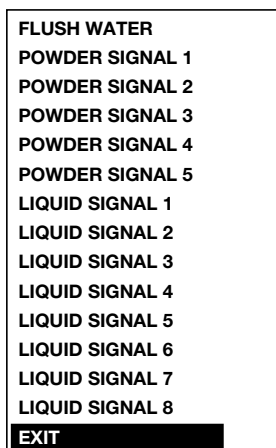


**Press SELECT.**





## Pause

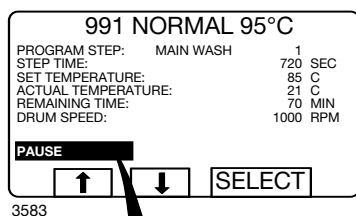

  
During program operation the display will look like this (see section "To start the wash program").

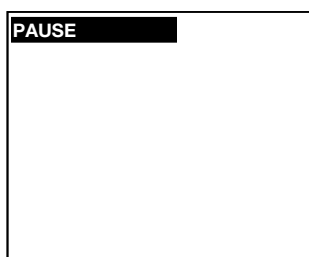

Press  or  one or more times to highlight "PAUSE".



Press SELECT.

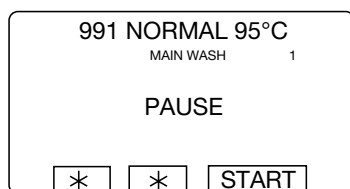


Press START to restart the wash program.

### Two ways of pausing during a wash program

 Note that you must be in normal wash mode to be able to pause in this way. If, for example, you are using "Manual Functions", you will have to exit that first before you can use Pause.


There are two ways of pausing during a wash program:

- 1 As an additional function. This is described in this section.
- 2 By pressing .


### When the machine pauses:

- Program operation is halted.
- Filling is halted (where applicable).
- Heating is halted (where applicable).
- The motor stops.
- The drain valve remains closed.
- The door cannot be opened.

Text

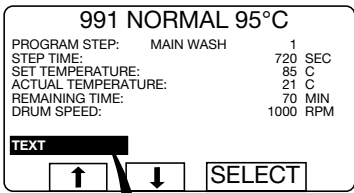




3583

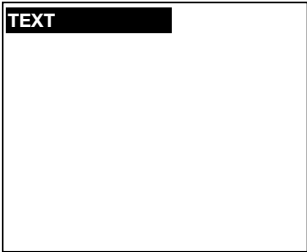

During program operation the display will look like this (see section "To start the wash program").

  
**Pressing "Text" displays more information**  
The text displayed is a description of the wash program selected. This text description is inserted when a new wash program is created. This procedure is described fully in the programming manual.



Press  or  one or more times to highlight "TEXT".



Press **SELECT**.

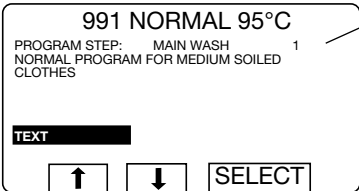

3630

Description of wash program



To return to the normal display:  
Press **SELECT** again.

**Automatic return to normal display**  
If you do not press **SELECT** within 20 seconds, the display will revert automatically.

## Select new wash program

991 NORMAL 95°C

PROGRAM STEP: MAIN WASH 1

STEP TIME: 720 SEC

SET TEMPERATURE: 85 C

ACTUAL TEMPERATURE: 21 C

REMAINING TIME: 70 MIN

DRUM SPEED: 1000 RPM

SELECT NEW WASH PROGRAM

↑

↓

SELECT

3583



SELECT NEW WASH PROGRAM

During program operation the display will look like this (see section "To start the wash program").

### To change the wash program after program operation has commenced

You can change to a different wash program at any time during program operation. When you do, the current function (for example, rinse) will be interrupted. The new program will start immediately after that (from the beginning).

This function is useful, for example, if you discover that you have started the wrong program.

Press  or  one or more times to highlight "SELECT NEW WASH PROGRAM".

Press **SELECT**.

991 NORMAL 95°C

PR. NO NAME

991 NORMAL 95°C

992 NORMAL 60°C

993 NORMAL 40°C

994 INTENSIVE 95°C

995 INTENSIVE 60°C

996 PERM PRESS 60°C

997 PERM PRESS 40°C

998 DELICATE 30°C

999 EXTR. HIGH 5 MIN

\* ↓ SELECT

3591

991 NORMAL 95°C

992 NORMAL 60°C

993 NORMAL 40°C

994 INTENSIVE 95°C


995 INTENSIVE 60°C

996 PERM PRESS 60°C

997 PERM PRESS 40°C

998 DELICATE 30°C

999 EXTR. HIGH 5 MIN

Press  one or more times as required...

...to highlight the new wash program.


Press **SELECT**.

The existing wash program will now be interrupted and the new one will begin.


### Automatic return to normal display

If no keys are pressed within 20 seconds, the display will revert automatically to its previous appearance.

Auto restarts

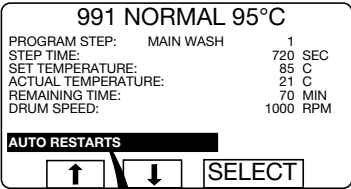

3583

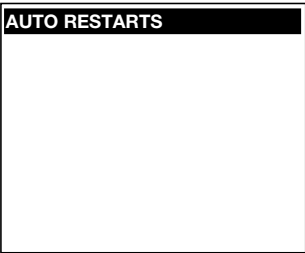

Press  one or more times to highlight "AUTO RESTARTS".




Press **SELECT**.

What is Auto restart?


Auto restart means that the same program will be repeated one or more times, according to the number set. The program will restart immediately, and the door will remain locked. If you have set auto restart, the display will show the number of restarts left.

This function is used primarily for testing.

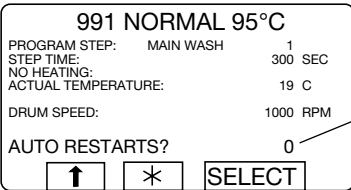

3594

Shows the number of times the program will restart.

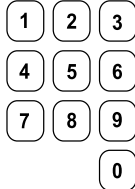


If required:  
**Use the numeric keys to change the required number of restarts.**



Press **SELECT**.

## Change °F/°C

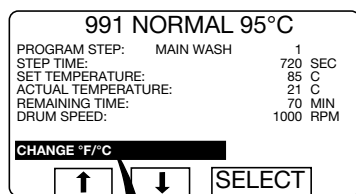


During program operation the display will look like this (see section "To start the wash program").

### To change temperature scale °F/°C

This function changes the temperature scale used for all temperatures displayed during the wash program.

Please note that this scale change applies only to the current program. The default temperature scale will apply next time you run a program.

To change the default temperature scale for all programs, use the function "SETTINGS", which is described in the Service Manual.

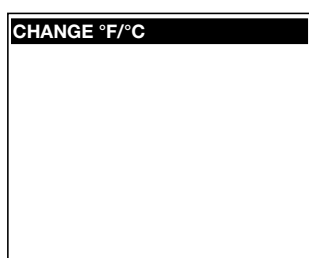


Press ↑ or ↓ one or more times to highlight "CHANGE °F/°C".



Press SELECT.

## Manual mode

## Manual operating when no program is running

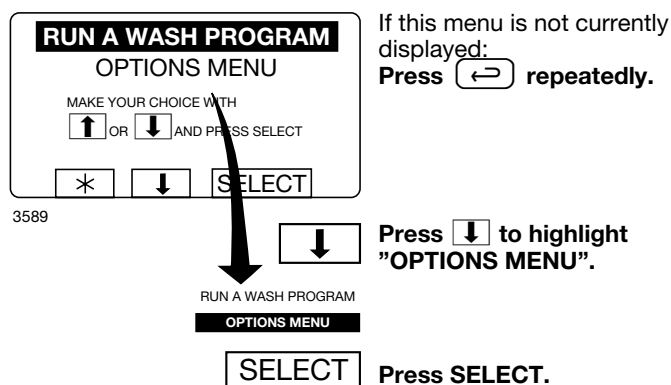

## Two types of manual operation


There are two types of manual operation, which should not be confused:

- **Manual operation when no program is running**  
These functions are described in this section.
- **Manual operation during a program**  
These functions are described in **section "Manual functions"**.

- Always lock the door first!

You must always close and lock the door first before you can operate the machine manually.

To lock the door, use the submenu MOTOR/DOOR, see section "Motor/door".

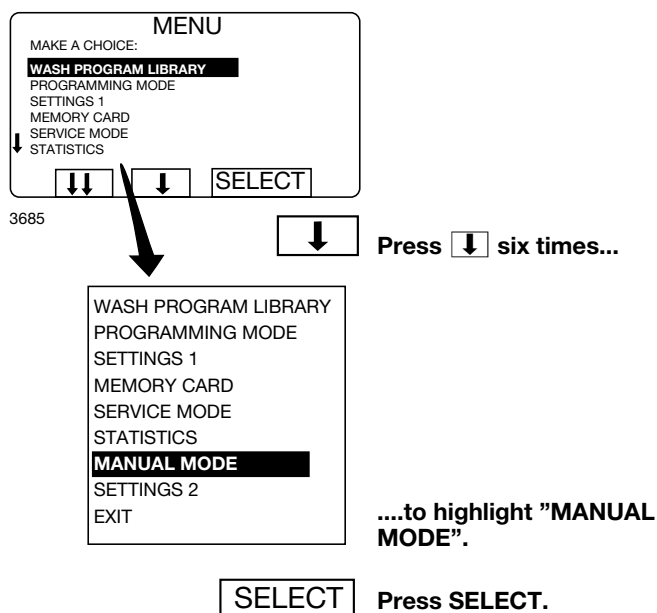

- **All manual settings are cancelled when you exit manual operation**

All manual settings (such as door, motor, temperature, and drain) will be cancelled when you exit manual operation.

The door is unlocked, the motor stops, the drain opens, heating is halted, and the temperature is reset to zero.

MANUAL MODE

MAKE A CHOICE:

MOTOR/DOOR

WATER/DRAIN

HEATING

DETERGENT/FLUSH

EXIT

\*

SELECT

3679

MOTOR/DOOR

WATER/DRAIN

HEATING

DETERGENT/FLUSH

EXIT



Select the function required using the cursor keys.



SELECT

Press SELECT.

## Manual operation when no program is running

### Motor/door (see section "Motor/door")

Lock/unlock door. Switch motor on/off (normal drum action).

### Water/drain (see section "Water/drain")

Operation of drain valve and all water valves.

### Heating (see section "Heating")

Heat water to any temperature required.


### Detergent/flush (see section "Detergent/flush")

Allows manual operation of all valves in detergent compartment or external detergent supply system.

### Exit

Returns you to the MENU display.


## Motor/Door

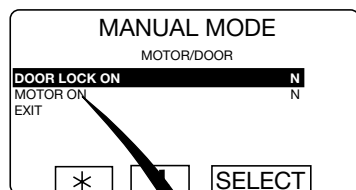

3687



 Press as required to select a function.



A toggle function:

 


Use Y/N to toggle the function from ON (Yes) to OFF (No).



When you have finished:

Press to highlight "EXIT".



Press SELECT.

### Lock the door and start the motor

#### DOOR LOCK ON

If you answer **Yes (Y)**:

The door will be locked. Note that you must always lock the door before you can operate the machine manually.


#### MOTOR ON

If you answer **Yes (Y)**:

The motor will start and operate, using normal action.



## Water/drain

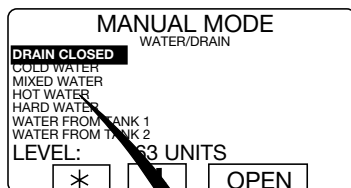

3688


To access this function, see instructions in section "Manual mode".

### Note!

For this function, all of the menus will not be available on machines with one I/O board.



Use or to select Drain or one of the six Water filling alternatives.

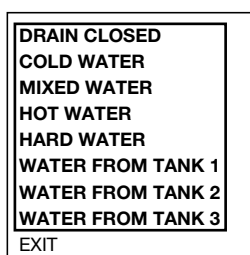


Drain (a toggle function) :  
Press Y/N to toggle the function from Yes (Y) and No (N).



Water filling:  
Press OPEN.  
The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.




When you have finished:  
Press to highlight "EXIT".

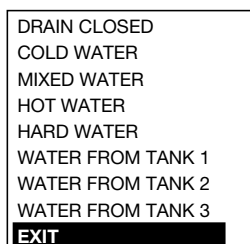

Press SELECT.

Heating

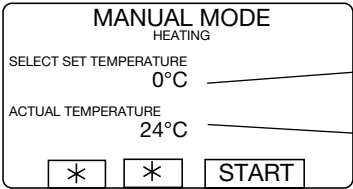


3689

To access this function, see instructions in section "Manual mode".

Temperature selected

Actual temperature

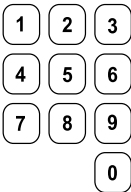

Use the numeric keys to enter the temperature the water is to be heated to.




**Press START.**  
Heating will now begin.



If you wish, you can cancel heating before the set temperature is reached:  
**Access this function again and press STOP.**


## Detergent/flush

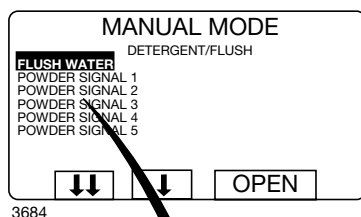




To access this function, see instructions in section "Manual mode".

### Note!

 For this function, all of the menus will not be available on machines with one I/O board.



Use  and  to select the function you require.

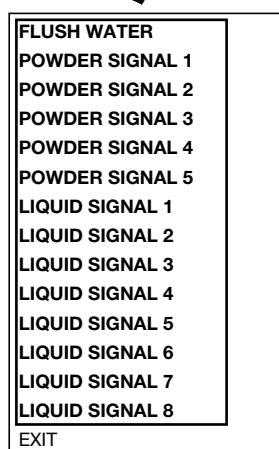

### Detergent signals and water flushing

#### FLUSH WATER:

 
This function uses water to clear detergent from the supply tubes of the detergent dispensing system.

#### POWDER SIGNAL:

This function will either: a) use water to dispense detergent from machine compartments, or: b) dispense detergent from an external system. The number of valves present will vary according to the machine type.


### Press OPEN.

The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.



When you have finished:


Press  repeatedly to highlight "EXIT".

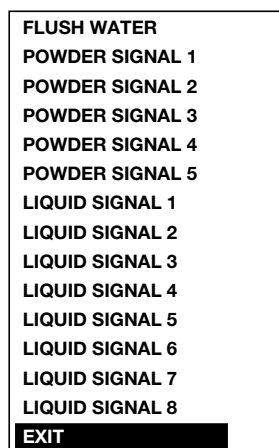

Press SELECT.

# Statistics

## To select Statistics

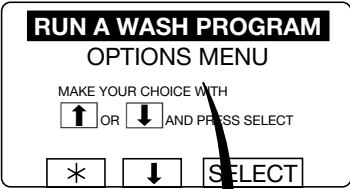


3589

If this menu is not currently displayed:  
Press repeatedly.



Press to highlight "OPTIONS MENU".

Press **SELECT**.

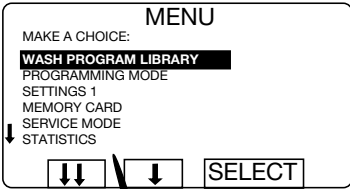

3685

Press five times...



...to highlight "STATISTICS".



Press **SELECT**.

STATISTICS		
TOTAL TIME RUN HOURS		0
TOTAL TRIP RUN TIME HOURS		0
HOURS SINCE LAST SERVICE		
LAST 5 ERROR CODES	PROGRAM	HOUR
08 NO HEATING	991	0
08 NO HEATING	996	0
08 NO HEATING	993	0
08 NO HEATING	991	0
08 NO HEATING	991	0

3690



To display the next page of statistics:

Press .

STATISTICS			
PROGRAM	WASHES	PROGRAM	WASHES
2	4	10	0
12	0	52	0
78	0	123	0
991	35	992	3
993	1	994	0
995	0	996	0
997	0	998	0
999	0		

3958



To display the next page of statistics:

Press .

STATISTICS			
PROGRAM	WASHES	PROGRAM	WASHES
S 1	0	S 2	0
S 5	0	S 6	0
S 80	0	S 90	0
S 99	0	S991	0
S992	0	S991	0
S994	0	S995	0
S996	0	S997	0
S998	0	S999	0

4040

EXIT

If a memory card is in place in the PCU, the memory card program statistics will be displayed. An "S" before the program number shows that it is a memory card program.

When you want to cancel the display of statistics:

Press **EXIT**.

## The Statistics function

The Statistics function gives you access to the following information:

### TOTAL RUN TIME HOURS:

Shows the total operating time for the machine since it was installed.

### TOTAL TRIP RUN TIME HOURS:

This register records the total number of operating hours since it was last reset. It can, for example, be used to keep track of operating time since the last machine service. The procedure for resetting it is described in **section "To reset "Total trip run time hours" to zero"**.

### HOURS SINCE LAST SERVICE

This register shows the time elapsed since the last service. The register can also be used to generate a signal on the display to show when service is needed (see the section "Settings 1" in the service manual).


### LAST 5 ERROR CODES:

This displays the most recent error codes, and tells which program was operating at the time and during which hour (according to the "total run time" record) the error code was flagged.

### NO. OF TIMES EACH PROGRAM USED:

Displays statistics for PCU programs and for programs on any memory card currently in place in the PCU.

Resetting statistic registers

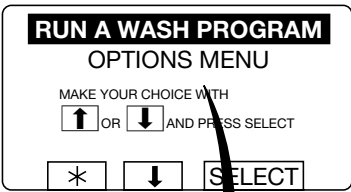

3589

If this menu is not currently displayed:  
Press  repeatedly.



Press  to highlight "OPTIONS MENU".

RUN A WASH PROGRAM  
OPTIONS MENU




Press SELECT.

Statistics registers which can be reset to zero

The following registers in the statistics function can be cleared (reset to zero):


- Total trip run time hours.
- Hours since last service.
- No. of times each program used (PCU programs).
- No. of times each program used (programs on any memory card currently in the PCU).

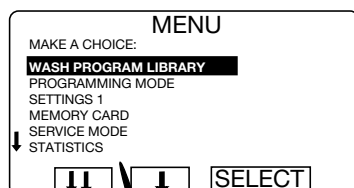

3685




Press ..four times....

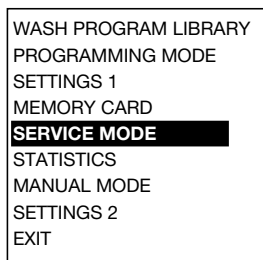

... to highlight "SERVICE MODE".



Press SELECT

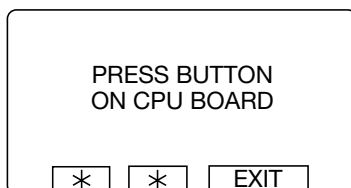

4209

Press the button on the CPU circuit board.




4042

Now you can choose either to clear/reset a register or to adjust the weighing equipment.



Press to highlight the option you want, then press SELECT.


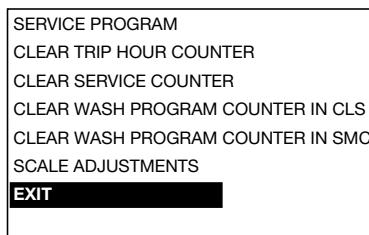

If you want to exit:  
Press repeatedly until EXIT is highlighted.


Press SELECT.



The service program may only be used by authorised personnel, because most safety interlocks are disabled.

**To prevent unauthorised or accidental use**  
Unauthorised or accidental use of the service program is prevented by requiring the user to locate and press the button on CPU board.

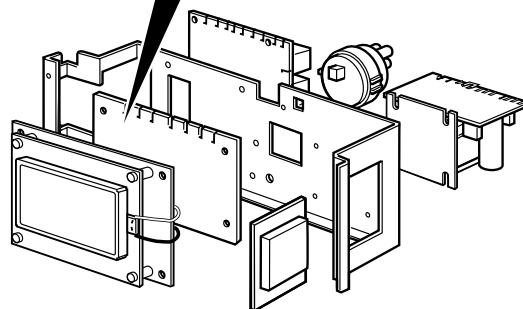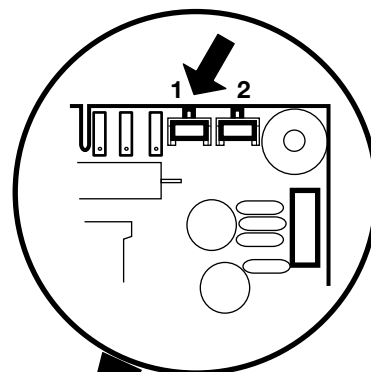

6675, 5227

## Time counter, hours after last service

**SERVICE MODE**

MAKE A CHOICE:

SERVICE PROGRAM  
**CLEAR TRIP HOUR COUNTER**  
**CLEAR SERVICE COUNTER**  
 CLEAR WASH PROGRAM COUNTER IN CLS  
 CLEAR WASH PROGRAM COUNTER IN SMC  
 SCALE ADJUSTMENTS

↑ ↓ SELECT

4041



SELECT

Both counters can be reset in the same way.

Press ↓ so that **CLEAR TRIP HOUR COUNTER OR CLEAR SERVICE COUNTER** will be marked.

Press **SELECT**.

**CLEAR COUNTER CLS**

ARE YOU SURE ?

PRESS SELECT ELSE PRESS ANY OTHER KEY

\* \* SELECT

3588

SELECT

First you have a chance to change your mind.

If you **do not want to reset** the register:

**Press any key other than SELECT.**

If you want to reset the register:

**Press SELECT.**



Number of washes for program in timer or memory card

SERVICE MODE

MAKE A CHOICE:

SERVICE PROGRAM

CLEAR TRIP HOUR COUNTER

CLEAR SERVICE COUNTER

CLEAR WASH PROGRAM COUNTER IN CLS

CLEAR WASH PROGRAM COUNTER IN SMC

SCALE ADJUSTMENTS

↑

↓

SELECT

4041

↓

SELECT

You can reset program in both timer and the memory card (if inserted).

Press 

↓

 so that **CLEAR WASH PROGRAM COUNTER IN CLS** or **CLEAR WASH PROGRAM COUNTER IN SMC** will be marked.

Press **SELECT**.

CLEAR COUNTER

CLS

FROM PROGRAM NUMBER:

0

TO PROGRAM NUMBER:

0

TO END: TO PROGRAM NUMBER = 0

\*

↓

EXIT

4045

1

2

3

4

5

6

7

8

9

0

Write from which program number you want to clear wash programs.

↓

Press 

↓

.

CLEAR COUNTER  
CLS

FROM PROGRAM NUMBER:  
1

TO PROGRAM NUMBER:  
0

TO END: TO PROGRAM NUMBER = 0

\*

↓

EXIT

4046

123

456

789

0

Enter digits corresponding to the program number (inclusive) up to which you wish to clear the total counter.

ERASE

Press ERASE.

CLEAR COUNTER  
CLS

ARE YOU SURE ?

PRESS SELECT ELSE PRESS ANY OTHER KEY

\*

\*

SELECT

3588

SELECT

First you have a chance to change your mind.

If you **do not want to reset** the register:

**Press any key other than SELECT.**

If you want to reset the register:  
**Press SELECT.**

For machines with weighing equipment installed only!

## Scale adjustments

SERVICE PROGRAM

MAKE A CHOICE:

SERVICE PROGRAM

CLEAR COUNTER

CLEAR SERVICE COUNTER

CLEAR WASH COUNTER IN CLS

CLEAR WASH COUNTER IN MEMORY CARD

SCALE ADJUSTMENTS

↑

↓

SELECT

4777



Press repeatedly until SCALE ADJUSTMENTS is highlighted.



Press SELECT.



When you have finished: Press repeatedly until EXIT is highlighted.

SERVICE PROGRAM

CLEAR COUNTER

CLEAR SERVICE COUNTER

CLEAR WASH COUNTER IN CLS

CLEAR WASH COUNTER IN MEMORY CARD

SCALE ADJUSTMENTS

EXIT



Press SELECT.

## Scale adjustments

The following functions are accessed via the SCALE ADJUSTMENTS menu:

### Reset scale to zero (see section "Reset scale to zero")

Used to make the weighing equipment display 0 when the machine has no load in it.

### Reset tare to zero (see section "Reset tare to zero")

Used to clear a stored tare parameter.

### Tare scale (see section "Tare scale")

Used to reset the weighing equipment so that a weight such as a container will not be included when calculating net weight.

### Set tare to a certain value (see section "Set tare to a certain value")

Used to enter a value for the tare parameter, a weight in hectograms.

### Read tare value (see section "Read tare value")

Used to check the value currently stored as the tare parameter.

### Calibrate the scale (see section "Calibrate the scale")

This function is used only on installation of a new scale unit.

### Zero calibration (see section "Zero calibration")

Used to increase the accuracy of the weighing equipment.

### Read version number (see section "Read version number")

This is where you find the version number of the weighing equipment.

If the weighing equipment is not connected, the error message "WEIGHING EQUIPMENT NOT CONNECTED" will be displayed. Connect the weighing equipment and try again. If necessary, see the section "Fault-finding, weighing equipment" in the machine manual.

For machines with weighing equipment installed only!

## Reset scale to zero

SERVICE PROGRAM

MAKE A CHOICE:

**RESET SCALE TO ZERO**

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

↑ ↓ SELECT

3583

**RESET SCALE TO ZERO**

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

ZERO CALIBRATION

READ VERSION NUMBER

EXIT

Check that "RESET SCALE TO ZERO" is highlighted.



If it isn't...

Press ↑ or ↓ as required to highlight "RESET SCALE TO ZERO".

SELECT

Press SELECT.

SCALE ADJUSTMENTS

RESET SCALE TO ZERO

DONE! PRESS SELECT

\* \* SELECT

3588

SELECT

Press SELECT.

### Reset scale to zero

"Reset weighing equipment" is used to make the weighing equipment display 0 when the machine has no load in it.

If your attempt to reset the weighing equipment fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

### Please note:

The machine must be unladen when you use this function, i.e. no water or wash load in the drum.

### Please note:

After a power-cut, the weighing equipment will always display 0, no matter what the actual load in the drum. In this event you will have to use the "Reset scale to zero" function.

For machines with weighing equipment installed only!

## Reset tare to zero

SERVICE PROGRAM

MAKE A CHOICE:

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

↑

↓

SELECT

4780



Press once to highlight "RESET TARE TO ZERO".

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

ZERO CALIBRATION

READ VERSION NUMBER

EXIT

SELECT

Press SELECT.

### Reset tare to zero

If your attempt to clear the tare parameter fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

SCALE ADJUSTMENTS

RESET TARE TO ZERO

DONE! PRESS SELECT

\*

\*

SELECT

3588


This screen shows that the stored tare parameter has been cleared.

SELECT

Press SELECT.

For machines with weighing equipment installed only!


Tare scale

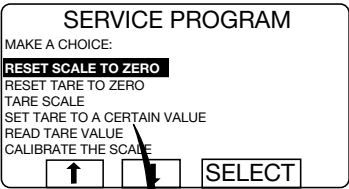

4780



Press  twice to high-light "TARE SCALE".

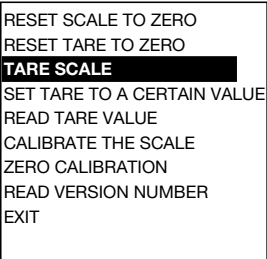


Press **SELECT**.

**Tare scale**

This function involves first loading the drum with, for example, a container, then taring (resetting) the weighing equipment so that the weight of the container will not be included when calculating net weight.

If your attempt to tare the weighing equipment fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

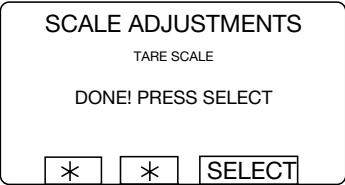

3588



Press **SELECT**.

This screen shows that the weighing equipment has been tared successfully.

For machines with weighing equipment installed only!

Set tare to a certain value

SERVICE PROGRAM

MAKE A CHOICE:

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

↑

↓

SELECT

4780



Press three times to highlight "SET TARE TO A CERTAIN VALUE"

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

ZERO CALIBRATION

READ VERSION NUMBER

EXIT

SELECT

Press SELECT.

## Set tare to a certain value

This function lets you enter a value for the tare parameter, i.e. a weight value which the weighing equipment will disregard when showing a net weight on the display. The function will automatically clear any earlier tare value when you enter a new one.

If your value is not entered successfully at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

SCALE ADJUSTMENTS

SET TARE TO A CERTAIN VALUE

ENTER TARE IN HG AND PRESS SELECT

\*

\*

SELECT

4785

1

2

3

4

5

6

7

8

9

0

Use the numeric keys to enter the tare you require, unit: hectograms; 1 hectogram = 100 grams).

SELECT

Press SELECT.

SCALE ADJUSTMENTS

TARE SCALE

DONE! PRESS SELECT

\*

\*

SELECT

3588

SELECT

Press SELECT.

This screen shows that the parameter has been entered successfully.

For machines with weighing equipment installed only!

## Read tare value

SERVICE PROGRAM

MAKE A CHOICE:

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

4780

↑

↓

SELECT

4780

↓

Press 

↓

 four times to highlight "READ TARE VALUE".

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

ZERO CALIBRATION

READ VERSION NUMBER

EXIT

SELECT

Press SELECT.

SCALE ADJUSTMENTS

READ TARE VALUE

10 HG

3588

\*

\*

SELECT

3588

SELECT

Press SELECT.

### Read tare value


This function lets you check the value currently stored as the tare parameter.

 
This screen shows the stored tare parameter (unit: hectograms (1 hectogram = 100 grams)).




For machines with weighing equipment installed only!


Calibrate the scale

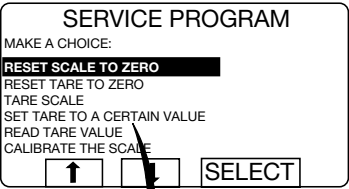


Press  five times to highlight "CALIBRATE THE SCALE".

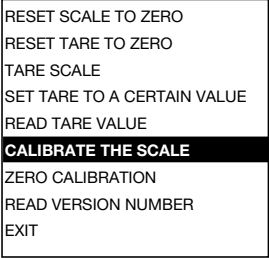

Press **SELECT**.

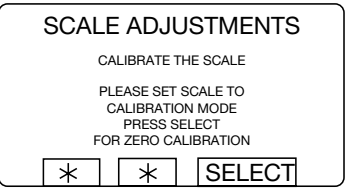

Press **SELECT**.

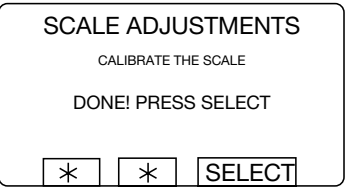

Press **SELECT**.

**Please note:**

This function is used only on installation of a new scale unit.

**Calibrate the scale**


If this calibration has not succeeded you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

**Please note:**

The machine must be unladen at the start of calibration, i.e. no water or wash load in the drum.

**Calibration mode/normal mode**

To gain access to the calibration switch in the scale unit, the top panel has to be taken off. Remove the four screws on the scale unit cover. Then the calibration switch can be switched between normal mode "ON" and calibration mode "CAL".

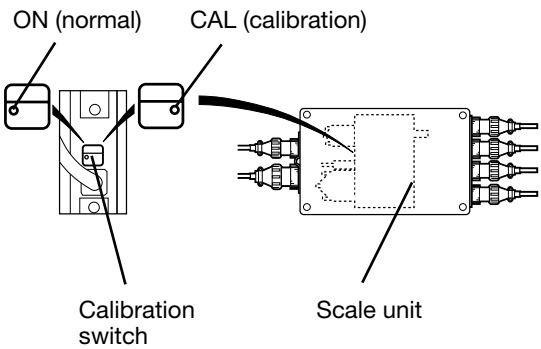

# Procedure for use

For machines with weighing equipment installed only!

SCALE ADJUSTMENTS

CALIBRATE THE SCALE

FILL DRUM WITH CALIBRATION WEIGHT  
ENTER WEIGHT IN HG AND  
PRESS SELECT

\*

\*

SELECT

4785

1

2

3

4

5

6

7

8

9

0

Put the calibration weight in the drum.

Use the numeric keys to enter the calibration weight in hg (1 hg = 100 grams).

SELECT

Press SELECT.

Calibration weight

A weight of between 40 kg and 400 kg should be used as a calibration weight.  
The higher the weight (within these limits), the better the weighing accuracy of the machine.

SCALE ADJUSTMENTS

CALIBRATE THE SCALE

DONE! PRESS SELECT

\*

\*

SELECT

3588

SELECT

Press SELECT.

SCALE ADJUSTMENTS

CALIBRATE THE SCALE

REMOVE WEIGHT AND PRESS SELECT

\*

\*

SELECT

3588

Remove the calibration weight.

SELECT

Press SELECT.

SCALE ADJUSTMENTS

CALIBRATE THE SCALE

PRESS SELECT FOR ZERO CALIBRATION

\*

\*

SELECT


3588

If you want to use the "Calibrate zero" function now:

SELECT


Press SELECT.

For machines with weighing equipment installed only!

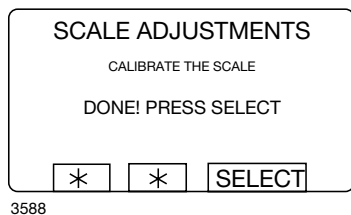

SELECT

Press SELECT.

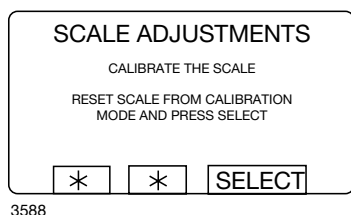


SELECT

Restore the calibration switch to normal mode.

Press SELECT.

## Calibration mode/normal mode


To gain access to the calibration switch in the scale unit, the top panel has to be taken off. Remove the four screws on the scale unit cover. Then the calibration switch can be switched between normal mode "ON" and calibration mode "CAL".

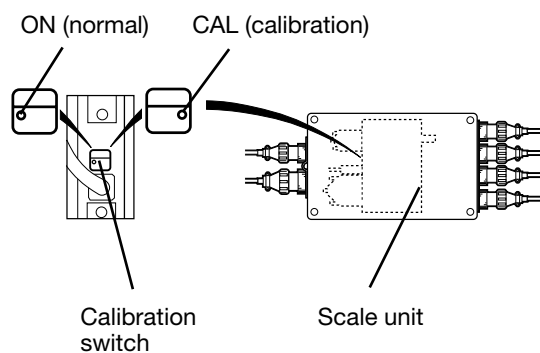


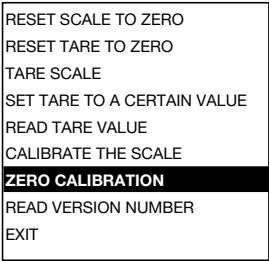
4758 A

For machines with weighing equipment installed only!


Zero calibration

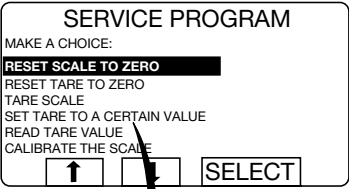

Press  six times to highlight "ZERO CALIBRATION".




Press **SELECT**.

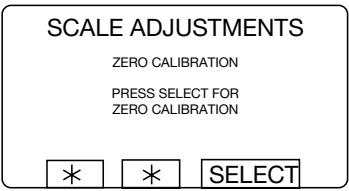

If you wish to calibrate zero for the weighing equipment:



Press **SELECT**.

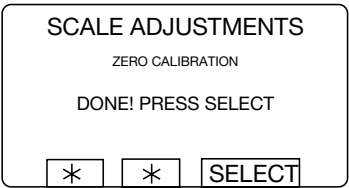

This screen shows you have calibrated zero.



Press **SELECT**.

**Zero calibration**

The “Zero calibration” function is used to increase the accuracy of the weighing equipment. This should be done once a month.

If this calibration has not succeeded you will see an error message equivalent to: “FAILED. PRESS SELECT” on the display.

For troubleshooting, see the section “Fault-finding, weighing equipment” in the machine manual.

**Please note:**

The machine must be unladen during this calibration, i.e. no water or wash load in the drum.

For machines with weighing equipment installed only!

## Read version number

SERVICE PROGRAM

MAKE A CHOICE:

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE


↑

↓

SELECT

4780

↓

Press  seven times to highlight "READ VERSION NUMBER".

RESET SCALE TO ZERO

RESET TARE TO ZERO

TARE SCALE

SET TARE TO A CERTAIN VALUE

READ TARE VALUE

CALIBRATE THE SCALE

ZERO CALIBRATION

READ VERSION NUMBER

EXIT

SELECT

Press SELECT.

SCALE ADJUSTMENTS

READ VERSION NUMBER

STATHMOS AB 3050 REV 00521

\*

\*

SELECT

3588

SELECT

The screen shows the version number.


Press SELECT.

### Read version number

In the event of a fault in the weighing equipment (which cannot be put right with the aid of the section "Fault-finding, weighing equipment" in the machine manual), make a note of the version number accessed via this function before you contact the supplier's service department.

## Memory card

### General introduction

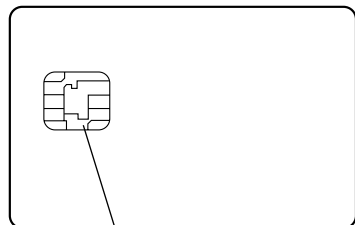

3605

Memory chip

A memory card is a plastic card, the size of a credit card, with an electronic memory chip inside it. This memory card is capable of storing 10 to 15 wash programs of normal size. If the programs are mostly small ones, more of them can be stored, whereas larger programs will reduce the number which can be held by the memory card. Memory cards of this type can be used to:




- transfer wash programs from one machine to another
- run wash programs straight from the memory card
- transfer wash programs from a PC to a memory card and from a memory card to a PC (these procedures, and how to write a wash program on a PC, are described in the manual for "Wash Program Manager" (WPM)).


A program stored on a memory card may be given restricted-use status. This means that:

- The program cannot be deleted or copied to the program control unit of a machine.
- You cannot alter the program or inspect the way it is written.
- To run the program you have to have the memory card and to insert it into the program control unit when the program is to be started.

**Note that "memory card" also can be called "smart card" or "SMC".**

## To select the "Memory card" function

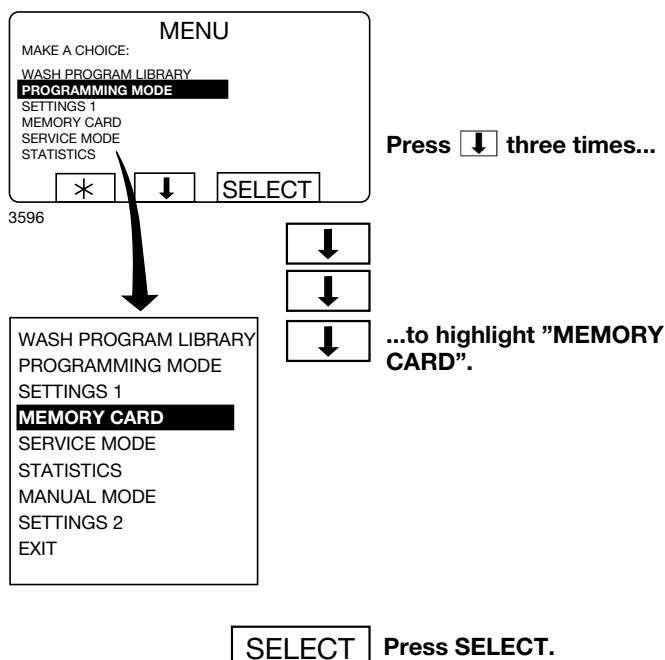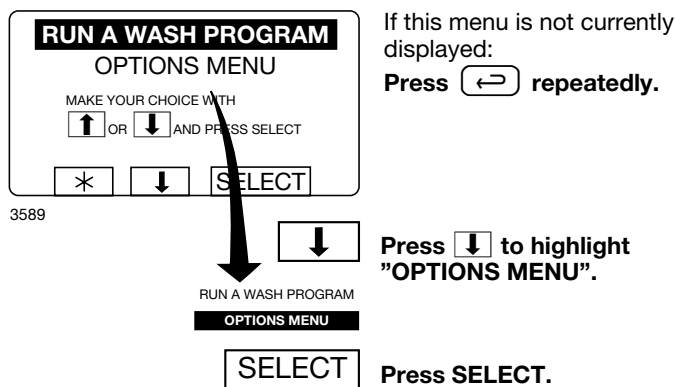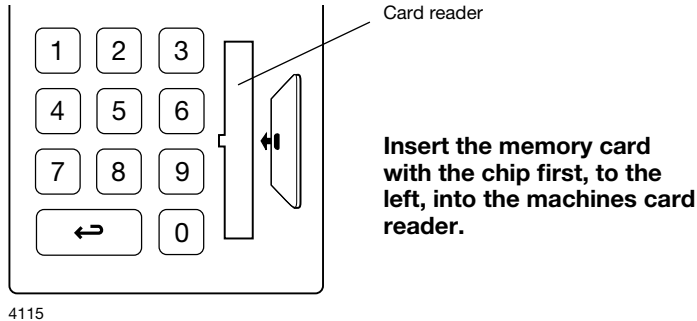

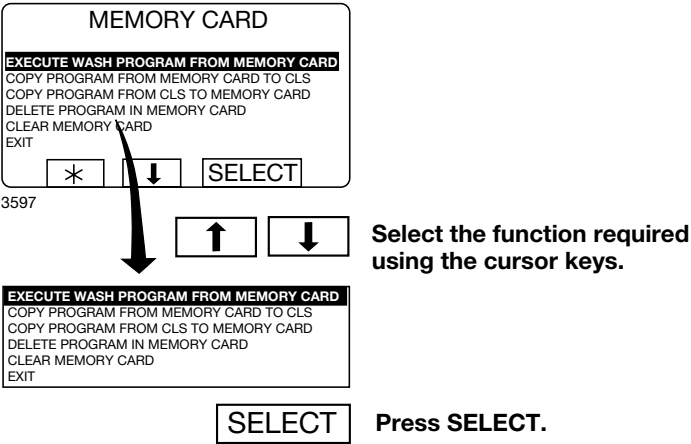

**"The "Memory card" functions**

**Execute wash program from memory card (see section "Execute wash program from memory card")**

A wash program can be run from the memory card, without first being copied to the machine. The memory card may be removed from the card reader after the program has started.

Programs on memory cards may have "restricted-use" status, which means that they can only be run straight from the memory card, not copied or modified.

**Copy program from memory card to CLS (see section "Copy program from memory card to CLS")**

One or more wash programs can be copied from the memory card to the memory chip in the machine's program control unit. Note that programs on the memory card with "restricted-use" status cannot be copied to the machine memory chip.

**Copy program from CLS to memory card (see section "Copy program from CLS to memory card")**


One or more wash programs can be copied from the memory chip in the machine's program control unit to the memory card. The memory card can hold 10 to 15 wash programs of normal size.

**Delete program in memory card (see section "Delete program in memory card")**

**Clear memory card (see section "Clear memory card")**



## Execute wash program from memory card

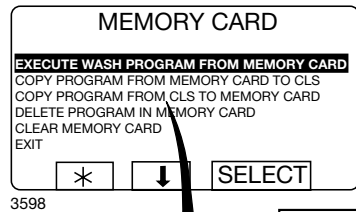


3598

To access this menu, follow the instructions in section "To select the "Memory card" function".


Highlight "EXECUTE WASH PROGRAM FROM MEMORY CARD" (press if necessary).

Press SELECT.

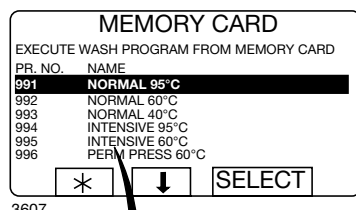

3607

If necessary, use to...

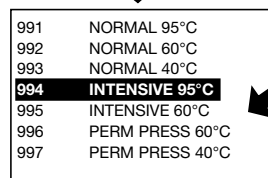

... highlight the wash program required.

Press SELECT.



3608

If you want to see the description of the program (where available):

Press TEXT.

To start the program:


Press START.

Once the program has started, the memory card may be removed from the card reader.

### To run a program from the memory card

In broad terms, the program control unit has two different memories. One is a "program memory" where all its wash programs are stored, the other is an "operating memory", which is used to hold the program currently in use. The program control unit takes the instructions it needs to run the program from the operating memory.

When a wash program is started, the correct program is retrieved from the program memory and copied into the operating memory.

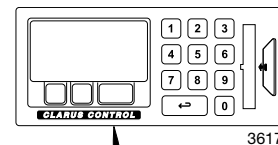

3617

#### Program memory program control unit

 
 
991	NORMAL 95°C
992	NORMAL 60°C
993	NORMAL 40°C
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM PRESS 60°C
997	PERM PRESS 40°C
998	DELICATE 30°C
999	EXTR. HIGH 5 MIN

#### Operating memory program control unit

996	PERM PRESS 60°C
-----	-----------------

Program currently being used

A parallel process takes place when a program is started from a memory card. In other words, the program is copied from the memory card into the operating memory, and the machine runs the program entirely from the set of instructions in the operating memory.



3618

#### Program memory card

1	MY OWN 40°C
2	MY OWN 60°C
3	MY OWN 90°C
4	MY OWN WOOL 30°C
5	MY OWN INTENSIVE


#### Program memory program control unit

991	NORMAL 95°C
992	NORMAL 60°C
993	NORMAL 40°C
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM PRESS 60°C
997	PERM PRESS 40°C
998	DELICATE 30°C
999	EXTR. HIGH 5 MIN

That is why you may remove the memory card from the card reader once the program has started.

Once the program has ended it is erased from the operating memory.

## Copy program from memory card to CLS

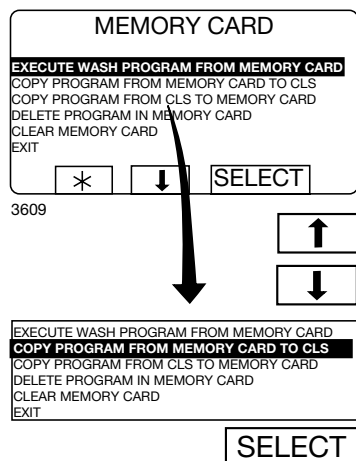


To access this menu, follow the instructions in section "To select the "Memory card" function".

**Note that** restricted-use programs on a memory card cannot be copied.

**Highlight "COPY PROGRAM FROM MEMORY CARD TO CLS"** (press or if necessary).

Press **SELECT**.

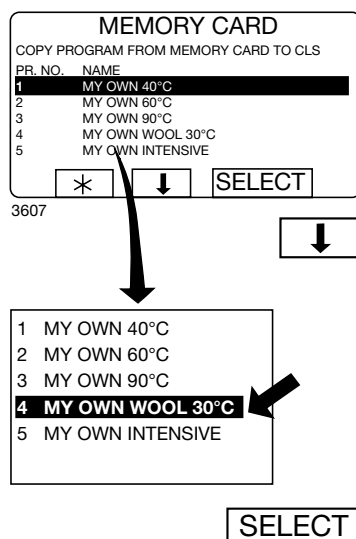

If necessary, use to...

... highlight the wash program required.

Press **SELECT**.


### What is a restricted-use program?

A wash program which has been created on a PC can be made a "restricted-use" program. This means that:


- The program cannot be deleted or copied to the program memory of a machine.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.

### What happens when a program is copied?


Both the memory card and the program control unit have memory chips capable of storing wash programs. The chip on the card can hold about 10 to 15 programs of normal size, while the chip in the program control unit has a capacity of several hundred programs.

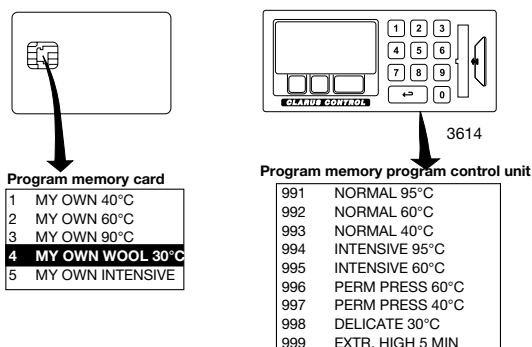

When a program is copied from a memory card to the machine's program control unit, it is copied, not moved (not deleted from the card). A copy is transferred from the chip on the memory card to the storage chip of the machine program control unit.

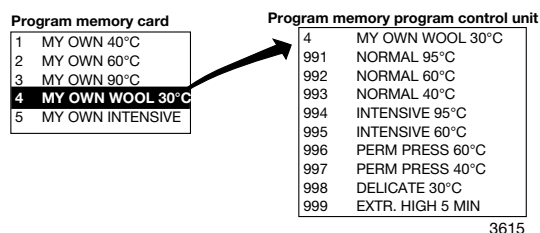

The program remains on the memory card, but another copy of it has now been stored in the program control unit.

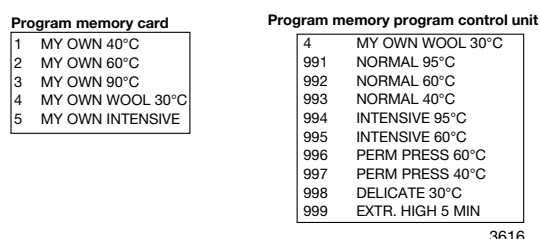

**MEMORY CARD**

COPY PROGRAM FROM MEMORY CARD TO CLS

NOW YOU CAN CHANGE NUMBER: 123

JUST PRESS SELECT IF NUMBER IS OK

\* ↓ SELECT

4046

1 2 3

4 5 6

7 8 9

0

SELECT

## Choose 1 or 2:

1 If you want to give the program a different program number (from the one it had on the memory card):

**Use the numeric keys to enter the new program number, then press SELECT.**

2 If the existing number is suitable:

**Press SELECT.**

**MEMORY CARD**

COPY PROGRAM FROM MEMORY CARD TO CLS

NOW YOU CAN CHANGE NUMBER: 00

PROG. NUMBER EXIST! OVERWRITE?  
PRESS SELECT OR ANY OTHER KEY

\* ↓ SELECT

4046

1 2 3

4 5 6

7 8 9

0

SELECT

If the number you have chosen is already used:

1 Select another number.

**Enter the new number and press SELECT.**

2 Erase the old program number.

**Press SELECT.**

**MEMORY CARD**

COPY PROGRAM FROM MEMORY CARD TO CLS

PROGRAM LOADED

PRESS ANY KEY TO CONTINUE...

\* \* \*

3612

After the program has been copied (it takes only a few seconds) the menu will look like this:

If you want to copy more programs:

**Press any key to continue.**

EXECUTE WASH PROGRAM FROM MEMORY CARD

COPY PROGRAM FROM MEMORY CARD TO CLS

COPY PROGRAM FROM CLS TO MEMORY CARD

DELETE PROGRAM IN MEMORY CARD

CLEAR MEMORY CARD

EXIT

4210

SELECT

When you have finished:

**Press ↓ repeatedly to highlight "EXIT".**

**Press SELECT.**

Copy program from CLS to memory card

MEMORY CARD

EXECUTE WASH PROGRAM FROM MEMORY CARD

COPY PROGRAM FROM MEMORY CARD TO CLS

COPY PROGRAM FROM CLS TO MEMORY CARD

DELETE PROGRAM IN MEMORY CARD

CLEAR MEMORY CARD

EXIT

\*

↓

SELECT

3609

↑

↓

Highlight "COPY PRO-GRAM FROM CLS TO ME-MORY CARD" (press ↓ or ↑ if necessary).

EXECUTE WASH PROGRAM FROM MEMORY CARD

COPY PROGRAM FROM MEMORY CARD TO CLS

COPY PROGRAM FROM CLS TO MEMORY CARD

DELETE PROGRAM IN MEMORY CARD

CLEAR MEMORY CARD

EXIT

SELECT

Press SELECT.

MEMORY CARD

COPY PROGRAM FROM CLS TO MEMORY CARD

PR. NO    NAME

991        NORMAL 95°C

992        NORMAL 60°C

993        NORMAL 40°C

994        INTENSIVE 95°C

995        INTENSIVE 60°C

996        PERM PRESS 60°C

\*

↓

SELECT

3591

↓

If necessary, use ↓ to...

... highlight the wash pro-gram required.

991    NORMAL 95°C

992    NORMAL 60°C

993    NORMAL 40°C

994    INTENSIVE 95°C

995    INTENSIVE 60°C

996    PERM PRESS 60°C

997    PERM PRESS 40°C

998    DELICATE 30°C

999    EXTR. HIGH 5 MIN

SELECT

Press SELECT.

What happens when a program is copied?

Both the memory card and the program control unit have memory chips capable of storing wash programs. The chip on the memory card can hold about 10 to 15 programs of normal size, while the chip in the program control unit has a capacity of several hundred programs.

Program memory card

1 MY OWN 40°C

2 MY OWN 60°C

3 MY OWN 90°C

4 MY OWN WOOL 30°C

5 MY OWN INTENSIVE

CLAMP CONTROL

1 2 3

4 5 6

7 8 9

← 0 →

3614

Program memory program control unit

991 NORMAL 95°C

992 NORMAL 60°C

993 NORMAL 40°C

994 INTENSIVE 95°C

995 INTENSIVE 60°C

996 PERM PRESS 60°C

997 PERM PRESS 40°C

998 DELICATE 30°C

999 EXTR. HIGH 5 MIN

When a program is copied from the machine's program control unit to a memory card, it is copied, not moved (not deleted from the machine). A copy is transferred from the storage chip of the machine program control unit to the chip on the card.

Program memory card

1 MY OWN 40°C

2 MY OWN 60°C

3 MY OWN 90°C

4 MY OWN WOOL 30°C

5 MY OWN INTENSIVE

992 NORMAL 60°C

Program memory program control unit

991 NORMAL 95°C

992 NORMAL 60°C

993 NORMAL 40°C

994 INTENSIVE 95°C

995 INTENSIVE 60°C

996 PERM PRESS 60°C

997 PERM PRESS 40°C

998 DELICATE 30°C

999 EXTR. HIGH 5 MIN

3621

The program remains in the program control unit, but another copy of it has now been stored on the card.

Program memory card

1 MY OWN 40°C

2 MY OWN 60°C

3 MY OWN 90°C

4 MY OWN WOOL 30°C

5 MY OWN INTENSIVE

992 NORMAL 60°C

Program memory program control unit

991 NORMAL 95°C

992 NORMAL 60°C

993 NORMAL 40°C

994 INTENSIVE 95°C

995 INTENSIVE 60°C

996 PERM PRESS 60°C

997 PERM PRESS 40°C

998 DELICATE 30°C

999 EXTR. HIGH 5 MIN

3622

MEMORY CARD  
COPY PROGRAM FROM CLS TO MEMORY CARD  
  
NOW YOU CAN CHANGE NUMBER: 998  
JUST PRESS SELECT IF NUMBER IS OK  

\*
↓
SELECT

4046

123

456

789

0

SELECT

## Choose 1 or 2:

1 If you want to give the program a different program number (from the one it had on the machine):

**Use the numeric keys to enter the new program number, then press SELECT.**

2 If the existing number is suitable:

**Press SELECT.**

MEMORY CARD  
COPY PROGRAM FROM CLS TO MEMORY CARD  
  
NOW YOU CAN CHANGE NUMBER: 00  
PROG. NUMBER EXIST! OVERWRITE?  
PRESS SELECT OR ANY OTHER KEY  

\*
↓
SELECT

4046

123

456

789

0

SELECT

If the number you have chosen is already used:

1 Select another number.

**Enter the new number and press SELECT.**

2 Erase the old program number.

**Press SELECT.**

MEMORY CARD  
COPY PROGRAM FROM CLS TO MEMORY CARD  
  
PROGRAM LOADED  
PRESS ANY KEY TO CONTINUE...  

\*
\*
\*

3612

After the program has been copied (it takes only a few seconds) the menu will look like this:

If you want to copy more programs:

**Press any key to continue.**

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
CLEAR MEMORY CARD  
EXIT

4210

SELECT

When you have finished:

**Press ↓ repeatedly to highlight "EXIT".**

**Press SELECT.**

Delete program in memory card

MEMORY CARD

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
CLEAR MEMORY CARD  
EXIT

3609

\*

↓

SELECT

↑

↓

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
CLEAR MEMORY CARD  
EXIT

3609

\*

↓

SELECT

To access this menu, follow the instructions in section "To select the "Memory card" function

**Note that** restricted-use programs on a memory card cannot be deleted.

**Highlight "DELETE PROGRAM IN MEMORY CARD"** (press **↑** or **↓** if necessary).

Press **SELECT**.

What is a restricted-use program?

A wash program which has been created on a PC can be made a "restricted-use" program. This means that:

- The program cannot be deleted or copied to the program memory of a machine.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.

MEMORY CARD

DELETE PROGRAM IN MEMORY CARD

PR. NO. NAME

1 MY OWN 40°C

2 MY OWN 60°C

3 MY OWN 90°C

4 MY OWN WOOL 30°C

5 MY OWN INTENSIVE

3607

\*

↓

SELECT

↓

1 MY OWN 40°C

2 MY OWN 60°C

3 MY OWN 90°C

4 MY OWN WOOL 30°C

5 MY OWN INTENSIVE

SELECT

If necessary, use **↓** to...

.... highlight the wash program required.

Press **SELECT**.

The program will now be deleted from the memory card. This takes between 5 and 15 seconds.

If you want to delete more programs:

**Continue in the same way as described above.**

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
CLEAR MEMORY CARD  
EXIT

4210

SELECT

When you have finished:

Press **↓** repeatedly to highlight "EXIT".

Press **SELECT**.

## Clear memory card

MEMORY CARD

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
CLEAR MEMORY CARD  
EXIT

\*

↓

SELECT

3609

↑

↓

EXECUTE WASH PROGRAM FROM MEMORY CARD  
COPY PROGRAM FROM MEMORY CARD TO CLS  
COPY PROGRAM FROM CLS TO MEMORY CARD  
DELETE PROGRAM IN MEMORY CARD  
**CLEAR MEMORY CARD**  
EXIT

SELECT

**Note that** restricted-use programs on a memory card cannot be copied or deleted.

**Highlight "CLEAR MEMO-  
RY CARD"** (press **↓** or **↑** if necessary).

**Press SELECT.**

### What is a restricted-use program?

A wash program which has been created on a PC can be made a "restricted-use" program. This means that:

- The program cannot be deleted or copied to the program memory of a machine.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.

MEMORY CARD

CLEAR MEMORY CARD  
THIS WILL CLEAR ALL PROGRAMS !!  
TO CONTINUE PRESS SELECT.  
ELSE PRESS ANY OTHER KEY.

↑

↓

SELECT

3629

SELECT

If you change your mind and do not want to delete the entire memory card:

**Press any key other than SELECT.**

If you want to delete all programs on the memory card (with the exception of any restricted-use programs):

**Press SELECT.**





---

## Maintenance

### Daily

- Clean the door seal and remove detergent residue.
- Check that the door does not leak.
- Clean the detergent compartment and wipe down the machine with a damp cloth.
- Check that the drain valve does not leak.
- Start the machine and check that the door remains locked while the machine is operating. Fast forward the machine to the stop position and check that the door cannot be opened until the program is completed.

### Every month

- Check that valves, hoses and connections do not leak.
- Remove any textile lint from the drain opening, joints in drain pipes etc.

### Every third month





Accumulated chemicals on the panel ledges.

- Disconnect electrical power from the machine.
- Turn off the water supply and bleed the pressure from the supply hoses.
- Remove the water supply hoses from the rear of the machine and clean or replace the inlet screens, as needed.
- Thoroughly clean the detergent dispenser.
- Remove the top and front panels from the machine.
- To help prevent corrosion, clean accumulation of detergent and other chemicals from the panels.
- Inspect inside of machine for leaks. Repair as needed.
- Clean the door gasket.
- Reinstall top and front panels.
- Restore power and return the machine to service.

## Every month (only for mop machines)

### Cleaning the mop elements

- ① • Depending on the size of the machine, you will find one or two core covers in the machine's inner drum so that the elements can be cleaned if so required. The front cover is located directly above the drain, while the other is in front of the element retainer. Two small screwdrivers are required to remove the core cover.
- ② • Use a screwdriver to press down on the retaining plate in the round hole on the core cover.
- ③ • Place the other screwdriver in the oval hole on the core cover and through the round hole in the retaining plate.
- Push the retaining plate towards the screwdriver which is pressing down on the retaining plate.
- ④ • Remove the core element/elements and clean the elements. If the elements are very dirty, it may be wise to remove the elements from the drum when cleaning them.
- The core covers are refitted in reverse order, with the difference that it is not necessary to press on the retaining plate; you only need to push the retaining plate back into place. When you hear a clicking sound, the retaining plate is in position.

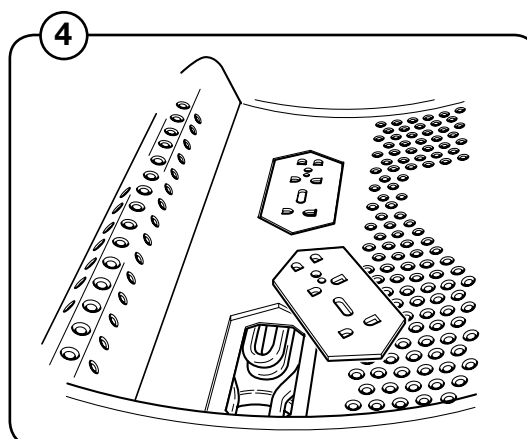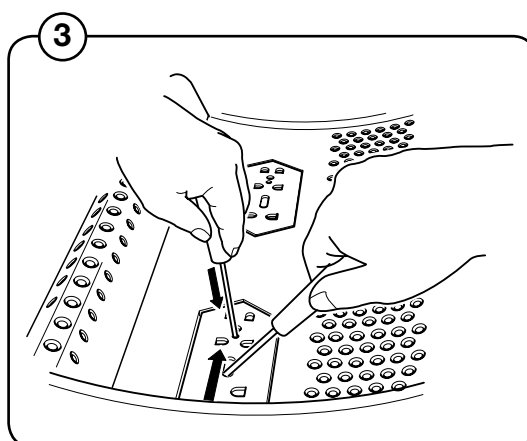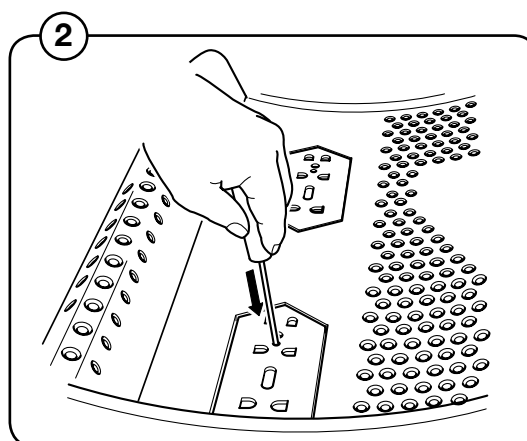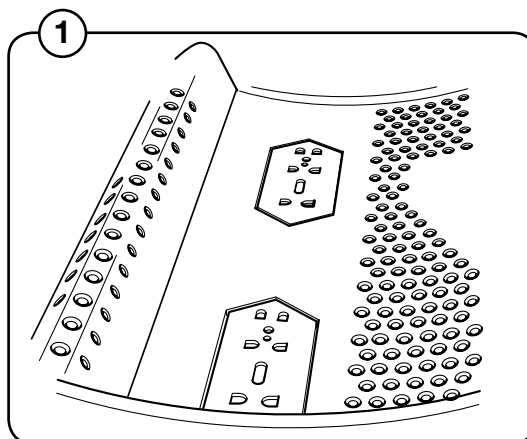

## Service information - Fault tracing

If the machine fails to start, check to ensure that:

- it is turned on at the mains.
- the manual shut-off valves are open.
- a programme has been selected.
- if it is a coin-operated machine, that the correct amount of coins or tokens have been inserted.
- the drum door is locked

On machines built for washing mops, it can be caused by too low a level in the program stage. The lowest level for a mop program in the main wash with heating is 22 scale units.



# Washer extractors, Tumble dryers, Hydro extractors

<b>Types:</b>	W.55H., W3..., WN3..., W4.H., EXSM.X., H1..., N1130., N1190., N2..., N3..., N4..., N5...
<b>Product standards:</b>	EN 60335-2-4, -7, -11
<b>EMF standards:</b>	EN 50366:2003 + A1
<b>EMC standards:</b>	EN 61000-6-1 (2001) W.55H., W3..., W4.H., N1130, N1190, N2..., N3... EN 61000-6-3 (2001) W.55H., W3..., WN3..., W4.H., EXSM.X., N1130, N1190, N2..., N3... A11 (2003) WN3..., N5... EN 61000-3-11 (2001) EXSM.X. EN 61000-6-2 (2005) WN3..., N4..., N5... EN 61000-6-3 (2007) N4...

## Försäkran om överensstämmelse

Vi, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Sverige

försäkrar under eget ansvar att denna produkt, med typbeteckning och enl. ovan, är tillverkad i överensstämmelse med följande direktiv:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gäller endast N'''''' och WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## CE Declaration of conformity

We, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Sweden

declare under our sole responsibility that the product of the type stated above is manufactured in conformity with the following EU directives:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' ... and WN3... only)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## EG-Konformitätserklärung

Wir, die, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Schweden

erklären hiermit in alleiniger Verantwortung, daß das Produkt mit der oben genannten Typenbezeichnung mit folgenden EU-Richtlinien übereinstimmt:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (Nur N'''''' und WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## Déclaration de conformité CE

Nous, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Suède

déclarons sous notre seule et unique responsabilité que le produit des type et numéro de série indiqués ci-dessus est fabriqué conformément aux directives UE suivantes:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' et WN3... uniquement)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## Declaración de conformidad CE

Electrolux Laundry Systems Sweden AB  
con sede en SE-341 80 Ljungby, Suecia

declara bajo su exclusiva responsabilidad que el producto cuyo tipo se especifica en el encabezado se ha fabricado conforme a las siguientes directivas:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (vale sólo N'''''' y WN3)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## Erklæring om EU-overensstemmelse

Vi, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Sverige

erklærer på eget ansvar, at produktet med typebetegnelse som angivet er fremstillet i overensstemmelse med følgende EU-direktiver:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gælder kun N'''''' og WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## EY-Vaatimustenmukaisuusvakuutus

Me, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Ruotsi

vakuutamme yksinomaan omalla vastuullamme, että tuote, jonka tyyppitunnus lukee yllä, on valmistettu seuraavien [EU]-direktiivien mukaisesti:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (vain N'''''' ja WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## EF-samsvarserklæring

Vi, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Sverige,

erklærer på eget ansvar at dette produktet, med typebetegnelse og produktionsnummer som angitt nedenfor, er produsert i samsvar med bestemmelsene i følgende direktiver:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gjelder bare N'''''' og WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## EG-Conformiteitsverklaring

Wij, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Zweden

verklaren hierbij op eigen verantwoordelijkheid dat het product van het type en met het serienummer zoals hieronder vermeld, is vervaardigd conform de volgende normen:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (alleen N'''''' en WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## Dichiarazione CE di conformità

Noi, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Svezia

dichiariamo sotto la nostra esclusiva responsabilità che il prodotto del tipo specificato sopra è conforme alle seguenti direttive [UE]:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (solo N'''''' e WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## Declaração CE de conformidade

Nós, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Suécia

declaramos sob nossa inteira responsabilidade que o produto com os números de série e de tipo abaixo indicados é fabricado em conformidade com as seguintes directivas [UE]:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (apenas N'''''' e WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## ΔΗΛΩΣΗ ΠΙΣΤΟΤΗΤΑΣ ΕΚ

H, Electrolux Laundry Systems Sweden AB  
SE-341 80 Ljungby, Σουηδία

δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν του ανωτέρω αναφερόμενου τύπου κατασκευάζεται σύμφωνα με τις ακόλουθες οδηγίες της Ευρωπαϊκής Ένωσης:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' και WN3... μόνο)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

## CE megfelelőségi nyilatkozat

Mi, az, Electrolux Laundry Systems Sweden AB  
SE-341 8 Ljungby, Svédország

felelőségünk teljes tudatában kijelentjük, hogy az alább megadott típusú termék gyártása a következő EU-irányelvekkel összhangban történik:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (csak az N'''''' és WN3... esetén)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Ljungby 2010.08.16



**Franco Panno**  
Vice President Technical Operations

## Translation table for model name to type of approval

Commercial name	Type
W455H	W.55H.
W465H	W3...
W475H	W3...
W4105H	W3...
W4130H	W3...
W4180H	W3...
W4240H	W3...
W4300H	W3...
FOM71 CLS	W3...
WB4130H	W3...
WB4180H	W3...
PW9	W3...
W475S	W3...
W485S	W3...
W4105S	W3...
W4130S	W3...
W4180S	W3...
W4250S	W3...
W4330S	W3...
W475N	W3...
W485N	W3...
W4105N	W3...
W4130N	W3...
W4180N	W3...
W4250N	W3...
W4330N	W3...
WD4130H	WN3...
WD4240H	WN3...
W4400H	W4.H.
W4600H	W4.H.
W4850H	W4.H.
W41100H	W4.H.
W4280X	EXSM.X.
W4350X	EXSM.X.
W4600X	EXSM.X.
C240	H1...
C260	H1...
C240R	H1...
C260R	H1...
C290R	H1...
T4130	N1130..
T4190	N1190..
PD9	N1190..
T4250	N2...
T4350	N2...
T4300S	N3...
T4290	N4...
T4530	N4...
T4650	N4...
T4900	N4...
T41200	N4...
T4900CR	N4...
T41200CR	N4...
T4300LE	N5...

Ljungby 2010.08.16



**Franco Panno**  
Vice President Technical Operations



#### **Skrotning av maskin**

När maskinen inte längre skall användas måste den lämnas till en återvinningsstation för destruktion. Många detaljer i maskinen går att återanvända, men den innehåller även annat material som måste tas om hand på ett korrekt sätt. Lämna därför aldrig maskinen eller delar av maskinen i hushållsavfallet, eftersom det kan leda till hälsorisker eller skador på miljön.

#### **Scrapping of machine**

When the machine is no longer to be used, it must be submitted to a recycling facility for destruction. The majority of the components in the machine can be reused, but it also contains other material that must be taken care of in the correct way. Therefore, never mix the machine or its parts with domestic waste as this may lead to health hazards or damage to the environment.

#### **Entsorgung des Geräts**

Wenn das Gerät nicht länger im Gebrauch ist, muss dieses einer Recyclingstation zur Entsorgung zugeführt werden. Viele Komponenten des Geräts sind recyclingfähig, enthalten aber auch Materialien, die vorschriftsmäßig entsorgt werden müssen. Entsorgen Sie daher das Gerät oder Geräteteile niemals im Hausmüll, da dies Gefahren für die Gesundheit oder Umweltschäden nach sich ziehen kann.

#### **Mise au rebut de machine**

Lorsque la machine n'est plus utilisée, elle doit être déposée à une installation de recyclage pour y être détruite. La majorité des composants de la machine peuvent être réutilisés mais celle-ci contient également d'autres matériaux qui doivent être traités correctement. C'est pourquoi vous ne devez jamais mélanger la machine ou ses pièces avec les ordures ménagères, risque de pollution pour l'environnement ou la santé.

#### **Desguace de la máquina**

Cuando la máquina no tenga que utilizarse más, ha de entregarse a una instalación de destrucción para su reciclado. La mayor parte de sus componentes pueden volver a utilizarse, pero consta también de otros materiales que han de ser tratados de la manera correcta. Por esa razón nunca mezclar la máquina ni sus partes con la basura doméstica pues esto podría constituir un peligro para la salud o dañar el medio ambiente.

#### **Bortskaffelse af maskinen**

Når maskinen ikke længere er i brug, skal den afleveres til destruktion på en genbrugsstation. Mange dele i maskinen kan genanvendes, men den indeholder også andre materialer, der skal håndteres korrekt. Smid derfor ikke maskinen eller dele af den ud sammen med husholdningens almindelige affald, da det kan være forbundet med sundhedsrisiko eller give miljøskader.

#### **Koneen hävittäminen**

Kun konetta ei enää käytetä, se pitää luovuttaa kierrätyskeskukseen tuhottavaksi. Suurinta osaa koneen osista voidaan käyttää uudelleen, mutta se sisältää myös materiaaleja, jotka pitää käsitellä asianmukaisesti. Älä sen vuoksi koskaan laita konetta tai sen osia kotitalousjätteen sekaan, sillä se saattaa aiheuttaa terveysriskejä tai vahinkoa ympäristölle.

#### **Skrotning av maskin**

Når maskinen ikke lenger skal brukes, må den leveres til en gjenvinningsstasjon for destruksjon. Det går an å gjenbruke mange deler av maskinen, men den inneholder også annet materiale som man må ta hånd om på riktig måte. Legg derfor aldri maskinen eller deler av maskinen i husholdningsavfallet, siden det kan føre til helse- eller miljøskader.

#### **Afdanken van de machine**

Als de machine niet langer gebruikt gaat worden, moet deze ter vernietiging worden aangeboden bij een recyclinginrichting. De meeste componenten van de machine kunnen worden hergebruikt, maar hij bevat ook ander materiaal dat op een juiste wijze moet worden behandeld. Daarom de machine of zijn onderdelen nooit bij het huisvuil zetten, want dat kan leiden tot gezondheidsrisico's of schade aan het milieu.

#### **Rottamazione della macchina**

Quando la macchina non può più essere utilizzata, deve essere affidata a un centro di riciclaggio che ne effettui la rottamazione. La maggior parte dei componenti della macchina sono riciclabili, ma ce ne sono anche alcuni che devono essere smaltiti in modo appropriato. Perciò, non mischiare mai la macchina o parti di essa con i normali rifiuti domestici, poiché ciò potrebbe comportare rischi per la salute o per l'ambiente.

#### **Złomowanie maszyny**


Wycofaną z użytkowania maszynę należy przekazać do zakładu utylizacji w celu złomowania. Większość podzespołów maszyny nadaje się do powtórnego wykorzystania, lecz zawiera ona także inne materiały, z którymi należy postępować w odpowiedni sposób. Z tego powodu niedozwolone jest łączenie maszyny lub jej części z odpadami domowymi, gdyż może to prowadzić do zagrożenia zdrowia lub szkody dla środowiska.

#### **Vyřazení přístroje**

Přístroj, který již nebude používán, by měl být odevzdán k likvidaci do ekodvora. Většina součástí přístroje může být opětovně použita, některé ale vyžadují likvidaci přesně daným způsobem. A proto nikdy nemíchejte dohromady přístroje nebo jejich části s domácím odpadem, mohlo by to vést ke zdravotním rizikům nebo k poškození životního prostředí.

#### **Οριστική απόσυρση μηχανήματος**

Όταν το μηχάνημα δεν προορίζεται για περαιτέρω χρήση, θα πρέπει να οδηγείται σε εγκατάσταση ανακύκλωσης για καταστροφή. Το μεγαλύτερο ποσοστό των εξαρτημάτων του μηχανήματος μπορεί να χρησιμοποιηθεί ξανά, αλλά το μηχάνημα περιλαμβάνει και άλλα υλικά η διαλογή των οποίων θα πρέπει να πραγματοποιείται με τον κατάλληλο τρόπο. Κατά συνέπεια, μην αναμειγνύετε ποτέ το μηχάνημα ή τα εξαρτήματά του με οικιακά απορρίμματα καθώς αυτό μπορεί να αποβεί επικίνδυνο για την υγεία ή επιβλαβές για το περιβάλλον.

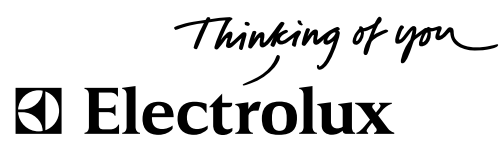

Electrolux Laundry Systems Sweden AB  
341 80 Ljungby, Sweden  
[www.electrolux.com/laundrysystems](http://www.electrolux.com/laundrysystems)

Share more of our thinking at [www.electrolux.com](http://www.electrolux.com)